

Workflow

Original Bungard

ALUCOREX SMD Stencils NE-CUT StenPrint 3000 Filmstar-PLUS UV-Laser Direct Hellas EXP 8000

Jet 34d Splash **Splash Center**

DL 500 Sprint 3000

AguaPur 1000

lonex

PCB-Lab

Favorit

Variodrill

Solide carbide

Etching or milling

CONTENTS **Basisline or Profiline** Page 4-5 **Presensitized boards** Page 6-7 Special boards Page 8 FR4 thin laminate Page 8 Cotherm Page 9 Presensitized aluminium Page 9 For solder paste application Page 10 Board cutter Page 10 **Stencil Printer** Page 11 Photoplotter Page 12 Laser direct imaging Page 13 Double sided vacuum exposure unit Page 14 Parallel beam exposure units Page 15 Spray etching machine Page 16 Spray etching machine Page 17 Spray etching machine Page 18 Conveyorised spray etching machine Page 19-21 Conveyorised spray etching machine Page 22-23 Waste water treatment system Page 23 Waste water treatment system Page 24-25 Lab accessories Page 26 **Through-Hole plating** Page 27 PCB drilling machine Page 28 Drills and routers Page 29 Comparison Page 30-31

CONTENTS

Bungard CCD

Bungard CCD/2/Eco MTC

Bungard CCD/2/MTC

Bungard CCD/2/ATC

Bungard CCD/MTC

Bungard CCD/ATC

Bungard CCD/XL/MTC

Bungard CCD/XL/ATC

Bungard CCD/Premium

Bungard CCD / Zubehör

RoutePro 3000

QualityScan 3000

Module

IsoCam

Compacta 30

RLM 419p

RBM 300

AIR 2000

ULX 110

SMT 3000

HotAir 06

Bungard

RMP

RBM 402 KF

Compacta 40 2 CU

Profi 2530 + 3045

Protec 2030 + 3040

RDC 15 / 21K / 30 Multidip



Overview Page 32-33

CNC machine Page 34-39

CNC machine Page 40-43

CNC machine Page 44-47

CNC machine Page 48-49 CNC machine

Page 50-51 CNC Software

Page 52-53

Software Module Page 54-55

Process control Page 56-57

CNC Software Page 58-59 Through-Hole plating line Page 60 Through-Hole plating line

Page 61 Through-Hole plating line

Page 62 Surface treatment Page 63 Dry film Laminator

Page 63 Brushing machine

Page 64 Brushing machine

Conveyorized PCB dryer Page 66

Oven Page 66

Dip coaters Page 67 Pick&Place Page 68 **Reflow Ofen** Page 69 Multilayer press Page 70-71 worldwide

Page 72-73

WORKFLOW

Professional PCB production including galvanic PTH

BASISLINE

raw material cut to size

(Ne-Cut)

.....

CNC-drilling

(BUNGARD CCD/2)

brush cleaning (RBM 300)

galvanic PTH

(Čompacta 30)

↓ brush cleaning

(RBM 300)

↓ lamination of etch resist

(RLM 419p)

film production with Bungard Filmstar

↓ vacuum exposure

(Hellas)

4

spray developing

(Splash / Jet 34D)

spray etching stripping of etch resist

(Splash Center)

4

brush cleaning (RBM 300)

.

electroless tin (SUR-TIN)

.

lamination of solder mask

(RLM 419p)

exposure of solder mask

(Hellas)

÷

spray developing

(Splash / Jet 34D)

÷

curing of solder mask

(Hellas or hot air oven)

CNC-V-cut or CNC-routing (Bungard CCD/2) solder mask... Components printing... upgradeable to multilayer



Latest and updated product specification is published under www.bungard.com C 11/2016 Bungard Elektronik

NY 8 10

Page 4



PRESENSITIZED BOARD

The name ORIGINAL BUNGARD stands for highest quality and processing safety of presensitized laminates. Like no other comparable product, this material allows a fast, flexible and faultless production of PCBs in small series and prototypes.

We use first-choice laminates approved and certified by UL, NEMA, DIN, IEC and others.

Several types of laminates, i.e. FR2, FR3, CEM1, and FR4 are available in thicknesses of 0.5, 0.8, 1.0, 1.6, 2.0 and 2.5 mm with either 18, 35 or 70 microns copper. The max. panel size is 510 x 1150 mm. Our cutting service provides sheets down to 50 x 50 mm min. size, with an accuracy of 0.1 mm.

PHOTORESIST

We coat the laminates with a special positive working liquid resist made according to our own recipe. The resist features highest exposure sensitivity, short processing turns and large processing latitude. The equal and dust-free coating has a defined thickness of $5\,\mu m$. The maximum spectral response is in the range of 350 - 400 nm. The line resolution is limited only by the type of exposure unit. Typical exposure times are 90 seconds on a set with fluorescent neon tubes. The resist

allows multiple exposure.

Referring to our special developer, at 20 °C the developing time is less than 45 seconds. On the other hand, the resist is absolutely stable for more than 5 minutes in the developer. It is resistant to acid etching or galvanic chemicals and even permits alcaline etching at a ph-level less than 9.5.

The boards are protected against mechanical damage and unwanted exposure by a special, blue coloured adhesive foil. Due to this protective foil, no flitters appear when cutting or milling the boards.

Each board is subjected to chemical and physical controls and tests before and after coating.

A shelf live of more than 1 year under normal storage conditions is guaranteed. Even 10 year old boards still work.

PRE-SENSITIZING SERVICE

We can coat boards that you supply with photoresist. The max, board size is 530 x 1160 mm, the min. board thickness is 0.3 mm. Our pre-sensitizing service includes cleaning, double sided coating in dip technology, pre-aging, optical control and protection foil. Attention: dip rim 10mm on top and drip rim of 10 mm at the bottom will reduce usable size by 20 mm on the short side (530 mm will go down to 510 mm). The rim is on request removed without charge.

BUNGARD NEGATIVE PHOTO-COATED BASE MATERIAL

As an alternative to our Bungard Positive Liquid Resist, you can also have all raw plate formats coated with a negative-developing tenting resist. In contrast to the liquid, approximately 5 μ m thick positive resist, the negative resist is 35 μ m thick and is laminated as a film and packaged in a light protection paper.

In this resist, the exposed areas are hardened by the light and remain on developing; The film template must therefore be created as a negative. The exposure time on the Bungard Hellas is approx. 25 s and after the exposure a color change from light blue to dark purple can be seen directly. You need special negative developer. Negative laminate is advantageous in longer etching processes (e.g., with thicker SMD stencils) because the resist will withstand the spray beam longer by the larger resist thickness. Disadvantage is the sensitivity and short shelf life. Order only the currently required need and process the plates as soon as possible and only in the yellow room condition.

We also distribute laminators and photoresists on roll for self-laminating.

STANDARD CUTTINGS FR4

Format (mm)

1.5 mm 1.5 mm 70 µm Cu 35 µm Cu 210 x 300 210 x 300 200 x 250 200 x 250 150 x 250 150 x 250 160 x 233.4 160 x 233.4 150 x 200 150×200 125 x 175 125 x 175 100 x 160 100 x 160 75 x 100 75 x 100

PANELS FR4

Format (mm)

0.5 - 1.5 mm 18 μm Cu		0.5 - 2.5 mm 70 μm Cu	1.5 mm 105 μm Cu	1.5 mm FR4 blue/black 35 j
510 x 570 x 0.5 510 x 1150 x 0.8 510 x 570 x 0.8 510 x 1150 x 1.0	$510 \times 1150 \times 0.5$ $510 \times 570 \times 0.5$ $510 \times 1150 \times 0.8$ $510 \times 570 \times 0.8$ $510 \times 1150 \times 1.0$ $510 \times 570 \times 1.0$	510 x 1150 x 0.8 510 x 570 x 0.8 510 x 1150 x 1.0	510 x 1150 x 1.5	510 x 1150 x 1.5
510 x 1150 x 1.5	510 x 1150 x 1.5	510 x 1150 x 1.5		
510 x 570 x 1.5	510 x 570 x 1.5			
		510 x 1150 x 2.0		
		510 x 570 x 2.0		
	510 x 1150 x 2.5	510 x 1150 x 2.5		
	510 x 570 x 2.5	510 x 570 x 2.5		1

PANELS FR2

Format 480 x 1000 x 1.5 mm 35 μ m Cu single or double sided

PANELS FR3


Format 510 x 1150 x 1.5 mm 35 µm Cu double sided

PANELS CEM1

Format 510 x 1150 x 1.5 mm 35 μ m single sided

CUTTING SERVICE

We cut down all boards to non-standard sizes on request. The maximum board size is 510 x 1150 mm, the minimum size is 50 x 50 mm. Remains will be included. Boards > = 2 mmwill be cut by saw. Saw cutting loss will be 3 mm per piece.

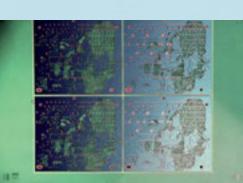

SPECIAL PURPOSE LAMINATES

Besides our ORIGINAL BUNGARD fotopositive coated base material we offer a wide range of laminates related to pcb manufacturing.

Engraving plates

for Front Panel Engraving. Size approx. 500 x 1000 x 1.5 mm. Black and nature available.

Technical glass fibre laminate

no copper clad, no photoresist, size: 510 x 1150 x1.55 mm

Drill backing boards

Drill backing boards for drilling pcbs e.g. with the BUNGARD CCD.

in stock: 500 x 1000 x 2.5 mm

500 x 1000 x 6 mm 245 x 330 x 6 mm

Multilayer production

Prepregs (250 x 350 x 0.2 mm) outer layer (FR4 250 x 350 x 0.3 mm 18/00) inner layer (FR4 250 x 350 x 0.5 mm 18/18) separation foil

(packing size for Prepregs and separation foil 50 pcs. each)

Copper clad laminates

FR4, CEM1, FR2, without photoresist. Approvals and standards as for presensitized boards.

The copper surface is not yet brushed.

FR4, panel size 510 x 1150 mm,

- Thickness 0.5 mm; Copper clad 18μm, 35μm and 70 μ m; single or double sided
- Thickness 0.8 mm; Copper clad 18µm and 35µm; single or double sided
- Thickness 1.5 mm; Copper clad 5μm; single sided; Copper clad 18µm, 35µm, 70 and $105\mu m$; single or double sided
- Thickness 2.0 mm; Copper clad 35µm and 70µm; single or double sided
- Thickness 2.5 mm; Copper clad 35µm and 70µm; single or double sided

CEM1

panel size 510 x 1150 mm, Thickness 1.5 mm Copper clad 35µm single sided

FR2

panel size 500 x 1000 mm, Thickness 1.5 mm Copper clad 35μ m single sided or double sided.

FR2 is perfect for isolation milling, because routers and drills will last much longer.

BUNGARD COTHERM:

For many applications customers demand a better thermal dissipation. One possible solution for heat problems are so called metal core boards, which consists of a 35 μ m copper layer, a 100 μ m isolation layer (FR4) and a 1000-2000 µm Aluminium layer.

Bungard offers this PCB type with brand name Cotherm. Cotherm is available with or without photosensitive resist and in these formats:

SURFACE:

If you use ORIGINAL BUNGARD Photopositive Coated PCBs, there is a simple technical alternative to protect the surface of your PCB:

Step 1:

usual

Apply our immersion tin SUR-TIN just Etch your ORIGINAL BUNGARD PCB as to the now open PADs. The photoresist will stay on the tracks and protect them.

Step 3:

no extra costs!

Step 2:


Develop the photoresist after etching once again with a negative film (solder PADs open).

Metal core board

Cotherm 1000/100/35 µm; Format 530 x 1150 mm (1,0 mm; 1 x 35 CU)

Cotherm 1500/100/35 µm; Format 530 x 1150 mm (1,5 mm; 1 x 35 CU)

Cotherm 2000/100/35 µm; Format 530 x 1150 mm (2,0 mm 1 x 35 CU) Cotherm can be processed like normal base material. Please note, that the isolation layer is very thin. With unskilled mechanical processing you can create contact between the copper layer and the aluminium layer. When etching, the aluminium must be completely covered against the attack of the etching agent. This is why we put protection foil on both sides of the Cotherm board.

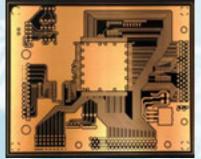



FR4 THIN LAMINATE

in 0.125 mm and 0.2 mm thickness


For semiflex application and multilayer!

The Bungard semiflex base material combines the advantages of the simple processing of the Bungard standard base material with flexibility for special applications.

Board formats:

100 x 160 mm 35 µm Cu 210 x 300 mm 35 μm Cu

510 x 1150 mm 35 μm Cu

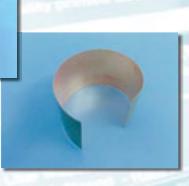

Please note that we sell boards of 100x160 only in units of 35 and 210x300 only in units of 8 boards.

ALUCOREX PRESENSITIZED ALUMINIUM

This product is perfectly suitable to manufacture front panels, machine or information plates as well as tampon printing clichés. ALUCOREX consists of an aluminium alloy which is anodized in a unique treatment sequence. After anodizing we coat the boards with a specially adjusted, high-resolution and resistant positive photo-coat. To protect the coat from mechanical damage or unintentional exposure we provide the boards with a light protection foil.

Making a front panel from ALUCOREX is simple and safe. The procedure takes only minutes and you need no equipment besides an exposure unit and a developing tray. The main steps,

- exposure and
 - developing
 - take together only 5 minutes.

The colour of the ALUCOREX-boards is already established in the scratch, light and chemical proof anodized layer. The exposed parts of this layer are removed during the developing process.

Image transfer can be done either positive or negative. With a positive image you receive a blanc background and coloured writing or image. With a negative image you will receive a coloured background with blanc writing.

This procedure is not widely known,

but gives excellent results. Good sol-

derability on the pads, nice optic and

The front panels can easy mechanically processed. With careful handling they can be drilled and punched through the protection foil before exposure. The specially adapted developer is neutralized after the job and can be disposed into the drain. No hazardous waste is created.

One ALUCOREX panel is 480 x 980 mm. We deliver the material in these colours black matt, black brilliant, red, green and blue brilliant.

- Black matt is available in 0.5, 1.0, 1.5, 2.0, 2.5 and 3.0 mm thickness
- Black brilliant in 1.0, 1.5, 2.0 and 2.5 mm.

 Red and Blue brilliant (bot sides are usable) is on stock in 1 mm thickness, as well as the green brilliant clichés, which is only single sided usable On request we cut down the

size 50 x 50mm. Being stored in a cool and dry condition the material has a guaranteed shelf life warranty of up to one year. Tests have shown that even 10 year old material can still be processed.

boards according to your wishes till board

colour deviation possible





NE-CUT

BOARD CUTTER

SMD STENCILS

of existing processes.

FOR SOLDER PASTE APPLICATION From now on, there is a quick, cheap and easy way

to make your metal template on your own. With

To do so we offer both positive or negative pre-

sensitized metal templates in many dimensions, in different thicknesses and hardnesses.

Being coated with a chemically resistant photoresist of high line resolution and steepness, these

templates offer you all the advantages already

known from the presensitized laminates for PCBs.

Brass boards are available in 500 x 1000mm. Thicknesses: 0.2, 0.3, 0.4, 0.5, 0.8 and 1.0 mm.

German Silver (CuNiZn) board size 280 x 1000.

Thicknesses: 0.1, 0.15, 0.2, 0.3, 0.4 and 0.5

Other thicknesses on request possible.

Other thicknesses on request possible.

already existing machines and without interference

The Board Cutter Ne-Cut was specially developed to cut PCBs up to 3.0 mm of thickness or aluminium up to 1.5 mm. If desired cutting of steel sheets up to 1mm or plastic up to 5 mm is possible as well as cutting of film sheet material or paper. With the transparent hood and the removable downholder you can cut pieces "on sight".

Features

- Cutting width max. 530 mm
- Two blades made of hardened and ground steel • Spring loaded built-in clamping unit in the front (removable)
- Bedstop with metric scale in the right front • Fully adjustable back stop with metric scale for
- batch work (0...300 mm) Anale and scale tolerance 0.1 mm
- Durable full steel construction • All important parts angular adjustable
- Simple exchange of blades
- Adjustable cutting angle
- Adjustable clearance

NE-CUT

Sizes (LxWxH): 740 x 450 x 290 mm

66 ka



STENPRINT 3000

STENCIL PRINTER

The StenPrint3000 is a manual printing system with a stable base for a high print quality. The solid construction provides clean and reproducible pressure with simple handling, even with small components and fine structures down to 0.5 mm.

It is ideally suited for the production of prototypes and small series.

In the basic model, one-sided and doublesided printed circuit boards can be printed with the help of the magnetic circuit board holders.

For this purpose, the circuit boards are fixed on the base plate and supported by the magnetic circuit board holders. By means of rotary knobs, the print alignment can be performed quickly and easily in X-Y and Theta axis.

A parallel lift ensures a clean separation of the printed circuit board and stencil and guarantees a perfect print image.

For double-sided printing you can fix the pcb with the magnetic pcb-holders (this is mandatory when using the universal stencil clamping frame)



STENPRINT 3000

Dimensions (LxWxH)	400 x 640 x 150 mm lid closed
Floor space	545 x 360 mm
Clamping frame size	max. 460 x 30 x 355 mm
Table / usable area	max. 390 x 290 mm
Adjustment range X / Y	+/- 7,5 mm
Theta adjustment range	+/- 3°
Parallel lift	2 mm
Weight	approx. 15 kg plus options
With stencil holder frame	e:
Template size	max. 420 x 320 mm
PCB size / usable area	max. 380 x 280 mm
With stencil clamping fro	ime:
Template size	max. 360 x 280 mm
PCB size / usable area	max. 330 x 270 mm
With magnetic holder set	t for two-sided printing:

max. 18 mm Circuit board bot

The third option is a mounting rail for the

use of fixed aluminum frames or common

Mounting rail

VARIATIONS


Three types of stencil supports are available.

Stencil holder frame

For the simplest of tasks, there is the universal stencil holder frame in which the stencils can be easily clamped without tension.

Stencil clamping frame

Optimal is the use of the universal stencil clamping frame. Various stencil sizes can be used here. The tensioning is carried out from two sides. No perforation of the stencil is required.





Latest and updated product specification is published under www.bungard.com © 11/2016 Bungard Elektronik

Page 1

Page 10

FILMSTAR-PLUS

PHOTOPLOTTER

Filmstar-Plus is the name of the next generation of our bitmap photoplotter series. Optimized for inhouse production of high end film layouts at reasonable price level the system can directly proceed (extended) Gerber files (RS 274X or RS 274C) or b/w bitmap (.bmp) files.

Filmstar, your nicely designed partner in cost effective production of your required film artworks.

Features:

- Film is fixed on a rotating drum. A highly focused red light laser diode is moving stepwise alongside that drum, driven by a precise stepper motor with worm and gear drive. Of course, all settings are software adjustable, calibrated and controlled.
- Film data read in either by USB connection to your computer or by USB stick.
- Full software package belongs to extend of delivery. It offers all required functionality like film arrangement, reverse and mirror image selection, preview, print preview, editing of aperatures (e.g. for soldermask films oversizing) and lots more.

.....

8		
		annual a
-	1.000	
		-14
e Dans Der Den	100,001,000	1.00
max in the	And don't at	Dame of the local damage o
a sea the sea		
Next .		
AND CONTRACTOR		
(Kan)	81. 	-

Features:

- Precise edge definition in photo quality
- Perfect blackness results in perfect opacity
- Extended software package included in delivery
- Improvements compared to Filmstar FP 8000: • Higher resolution, up to 16 256 x 25 400 dpi
- Stand alone unit no separate PC necessary.
 Data can be transferred to the plotter either via
- USB stick or via USB cable • New electronics with Touch-Display and intuitive
- user interface
- Software update: customized Windows optics, Windows routine for opening and saving of files.
 Higher resolutions in Gerber2bitmap, various calibration programs in Run_Photo_USB
- 3 different plot speeds for either high precision or less time consumption

FILMSTAR-PLUS

output resolution from 1625 ... 16256 dpi x 12700 dpi

 Plotting speed: 7 mm of film width (x 365mm film length) per minute for 2032 dpi. (20% quicker at

380 x 460 mm² 360 x 430 mm²

max. plot format

230 x 360 mm²

360 x 360 mm²

700 x 350 x 200 mm

External power supply

110V-240V / 24V-2A

approx. 20 kg

max. film size

Standard

XI

250 x 380 mm²

390 x 380 mm²

1625dpi, half speed for 4064 dpi)

Source of light: Laser diode 670 nm (red)
Data input: Gerber (RS 274D, RS 274 X), high

Photoplotter software, included on CD:
Gerber viewer; automatic aperture converter for all known electronic CAD lavout systems

D-code editing, output preview & print
Interactive, absolute or relative image positioning,

 Reversed (negative) plotting, image mirroring
 Control software requires computer with Windows XP[™] to Windows 10[™] (64-bit). USB port

film and drill panelization

(25400 dpi internally)

resolution BMP

BUNGARD LASER DIRECT IMAGING (LDI)

Bungard LDI, UV laser direct imaging system for all common types of photoresists.

Target Customers are electronic developers with frequent layout changes, who want to process their PCB prototypes (e.g. antenna structures), in wet processing technology according to industrial standards. Most samples shown here were typically made in about 3 minutes.

The laser head has a resolution better than 50 microns and will be available either as an add on item for existing CCD machines as well as a complete CNC system that can not only expose but also drill and route.

The Bungard Laser Direct will be able to expose a Eurocard pcb in about 15 minutes, depending on the packing density and aspect ratio. To control the laser unit the software LaserPro is required. In LaserProtravel speed, travel height, light energy and start delay (Prelight) can be set for currently 1 - 15 tools.


LaserPro processes HPGL data (HPGL 7475A) in the same manner as the other operating software for the Bungard CCD RoutePro and DispPro. If necessary, the CAD-CAM software IsocamPro is required to convert Gerber Data into HPGL travel paths.

After exposure, the boards can be developed and etched like our normal presensitized base material. The Bungard LDI does not remove copper from the substrate. When lasering copper dangerous gases are produced, that need special collecting neutralizing and disposal measures. In our opinion, etching is the far more user friendly option.



With the Bungard Laser Direct Imaging prototypes can be realized more quickly and accurately than with previous technology. For small series production, we still recommend to make a layout film with the Bungard Filmstar and expose with the Hellas or - for finer resolution - with the EXP 8000

The Bungard Laser head and the software LaserPro are offered at an unbeatable price. They can be retrofitted to all Bungard CCD machines younger than in 2006. Ask us for a quote!

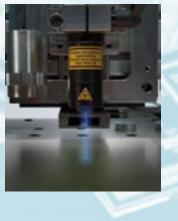

LASER DIRECT IMAGING

aser class: class 3B
ower: 120mW
Dimensions (LxWxH): 47 x 47 x 110 mm
afety:
) Magnetic safety switch; laser turns on only if
the unit is mounted facing downward into the
CCD holder
) PVC-protection cover
ower connection: Via Bungard CCD
Control: Via Bungard CCD/RoutePro3000
equirements: Bungard CCD
Software RoutePro3000
Laser-License for RoutePro3000
pplication:
xposure by UV-laser diode; wave length approx. 420
m; suitable for positive- and negative photoresist,
older mask and Alucorex

Dimensions (LxWxH):

Weight:

Power supply

Centrals

Carlos

50µm Leiterbahn und At

HELLAS

VACUUM EXPOSURE UNIT

High precision vacuum exposure unit especially designed for double sided contact exposure of presensitized base materials such as tampon printing clichés, PCBs, front-panels, daylight films and other UV sensitive coatings.

Features

- 2 x 6 superactinic UV-tubes, each 20 W Special reflectors for minimum undercut
 - Analogue light emission display

 - Lower exposure surface from 8 mm special glass

- Upper exposure area from structured mylar foil in a sturdy frame
- Working area 570 x 300 mm
- Suitable for fine-line PCBs
- Maintenance free vacuum (80%) with gauge
- display, 1380 l/hour continuous rating • Digital timer 1 second - 9 min 59 sec. with count-down, auto-reset and beeper
- Built in cooling fan allows long time exposure or baking processes
- Separate choice of upper/low exposure possible
- Sturdy steel housing

EXP 8000

PARALLEL BEAM EXPOSURE UNIT

The EXP 8000 is a high speed double sided exposure machine mainly designed for industrial production and equipped with two 4000 W mercury halide lamps. These lamps in about 900 mm distance from the PCB ensure almost parallel light.

Construction

Sturdy, welded tube frame with coated sheetplates. The chassis consists of a sliding drawer system and a yellow light table in the machine's front.

Operation

EXP 8000 guarantees a perfect exposure within a minimum of time and energy consumption by two UV sensors. The required exposure energy is preset on a keyboard and shown on a digital readout. The two intelligent UV-light emission controllers (one per side) automatically measure the energy supplied per side and stop the exposure at preset energy amount.

A vacuum pump provides a close and uniform contact between artwork and board. The exposure cycle starts when the drawer is pushed in. At that moment the lamp shutters are opened and the lamp's powersupply is increased from stand-by to full power. In stand-by mode, the energy is reduced to 25% in order to save energy and avoid heat problems. The machines have powerful cooling fans. When the exposure is finished the vacuum is stopped.

Features EXP 8000:

- Max. Working area 600 mm x 600 mm (recommended: 400 mm x 500 mm) • Microprocessor controlled UV-light emission
- Vacuum assisted drawer
- Suitable for fine line PCBs

Built-in yellow light table

BURGING.

- Suitable for exposure and curing of solder mask.
- **EXP 8000** Power suppy: 380 V, 50 Hz triple phase 5 A / 10 A / 5 A L1/L2/L3: Unit Size (LxWxH): 820 x 1800 x 1950 mm 270 kg
- Weight



HELLAS	Hellas Z	Hellas E	Hellas XL	Hellas XL E
Dimensions (LxWxH):	620 x 650 x 240 mm	620 x 650 x 240 mm	680 x 650 x 240 mm	680 x 650 x 240 mm
Weight:	eight: approx. 40 kg		approx. 45 kg	approx. 45 kg
Electrical Connection:	220 V~, 50 Hz, approx. 800 W			
Exposure area:	approx. 570 x 300 mm	approx. 570 x 300 mm	approx. 365 x 575 mm	approx. 365 x 575 mm
Number of Tubes	2 x 6	1 x 6	2 x 7	1 x 7
Separate switch on and shutdown of the exposure flat	Yes	No	Yes	No
Permant Exposure	Yes	Yes	Yes	Yes
Amperemeter	Yes	No	Yes	No
Cover Switch	Option	Option	Option	Option
Digital timer	Yes	Yes	Yes	Yes
Cross-flow fan	Yes	No	Yes	No
Milky Foil for Clichee	Option	Option	Option	Option



50µm Leiterbahn und

JET 34D

SPRAY ETCHING MACHINE

Powerful spray etching or spray developing machine mainly designed for use in pcb labs. Capacity up to 3m²/h possible (single-sided, positive material).

Features

PLASH

- Maintenance free system with self-cleaning nozzles
- Etching speed of 35µm Cu within 90 seconds (warm Fe-III-CI)
- Line resolution better than 0.1 mm
- · Big lid for easy loading, with built-in security switch
- Recommended board size: 300 x 400 mm (Maximum 350 x 450 mm)
- Small PCBs can be fixed on carrier with adjustable holder
- Easy and clean handling by hinge free lid and handle outside of machine
- If you turn the carrier you can etch double sided
- Overflow wash tank in the front for rinsing etched boards
- Digital timer with countdown, auto-reset and beeper
- · Sturdy construction fully made of PVC and titanium



- Suitable for all common etchants. Also well suited for spray developing of dryfilm resist (anti-foam agent recommended)
- Strong 1000 W heater with thermostat and over-heat fuse
- 3 cog valves (etching tank, rinse overflow, rinse inlet)



SPLASH

SPRAY ETCHING MACHINE

Spray etching machine for laboratory use with integrated static rinse. Machine is suitable for double sided material. Special emphasis was put on ergonomical and clean etching and rinsing as well as on low chemical drag out.

Features

- Maintenance free system with self-cleaning nozzles and magnetic pump
- Etching speed of 35 μ m Cu within 90 seconds (warm Fe-III-CI).
- Big window to the etching chamber made from transparent PVC.
- Maximum board size: 210 x 300 mm. Splash XL: 300 x 400 mm
- Line resolution better than 0.1 mm

- Lid to the etching chamber with safety switch
- Removable board holder made from Titanium and PVC. Can be locked in drip-off position
- Easy access to the etching chamber.
- Strong 1000 W Quarz heater, controlled by thermostat
- Overheat fuse
- Digital timer with count down, auto reset and beeper.
- Integrated rinsing zone with drip off holder. • 3 cog valves for all tanks
- Suitable for spray developing
- (100 µm)
- Suitable for all common etchants





SPLASH

Power supply: 230 V~, 50 Hz, approx. 1,5 kW 600 x 660 x 1200 mm Dimensions (LxWxH): Working Level: 900 mm Weight: 35 kg Tank capacity: approx. 25 l

SPLASH XL

Power supply: 230 V~,	50 Hz, approv. 1.5 kW/
ower supply: $230 v \sim$,	30 HZ, upprox. 1,3 KW
Dimensions (LxWxH):	800 x 650 x 1200 mm
Vorking Level:	900 mm
tchingformat:	300 x 400 mm
Veight:	40 kg
ank capacity:	approx. 40 l

JET 34D

Dimensions (LxWxH): approx. 600 x 700 x 1100 mm Working Level: 900 mm 220 V~, 50Hz, approx. 1.5 kW Power supply: Tank capacity: 161 35 kg Weight:

SPLASH CENTER

SPRAY ETCHING MACHINE

Laboratory etching machine with static and spray rinse, integrated developer tank, a reserve tank for e.g. chemical tinning and a squeeze dryer. The Splash-Center is suitable for double-sided PCBs. Special emphasis was put on ergonomical and clean etching and rinsing as well as on low chemical drag out.

Etching compartment:

- Maintenance free etching system with solid stream nozzles
- Etching speed of $35 \,\mu m$ Cu within 90 seconds (warm Fe-III-CI).
- Big window to the etching chamber made from transparent PVC.
- Maximum board size: 210 x 300 mm /Splash-Center XL: 300 x 400
- Line resolution better than 0.1 mm (100 μ m)
- · Suitable for all common etchants. Fe-III-CI recommended
- · Lid to the etching chamber with safety switch

- Removable board holder made from Titanium and PVC. Can be locked in drip-off position
- Easy access to the etching chamber.
- Strong 1000 W Quarz heater, etching temperature controlled by thermostat
- Overheat fuse
- Digital timer with count down, auto reset and beeper.
- Integrated rinsing zone with drip off holder.
- 3 cog valves for all tanks
- Suitable for spray developing

Developer and rinse compartment:

- Magnetic centrifugal pump to revolve developer
- two integrated static rinses, one can be used for neutralization purposes
- Fresh water spray zone activated by foot switch, including splash protection
- A reserve tank, e.g. for immersion tin
- 5 ball valves to drain all tanks, cover protected from the front side.
- All tanks with lids
- Integrated drip tray for all tanks, sure-footed about 120 mm above the ground
- Integrated mechanical squeeze dryer

DL 500

CONVEYORISED SPRAY **ETCHING MACHINE**

The DL 500 is a double sided conveyorised spray etching machine with integrated rinsing zone. This machine is easy to maintain and fits perfectly to a modern PCB laboratory. The maximum capacity within one hour is 10 m². Designed for being used for laboratory purposes, there are lots of different applications (e.g. spray developing of tenting or solder mask) and options available. Of course the machine can be modified according to vour needs.

Features:

- Working width 510 mm
- Adjustable conveyor speed 0 1.5 m/min.
- Joint free belt drive
- · PCB is firmly secured by upper and lower transport rollers
- Powerful etchant pump (200 l/min)
- Double sided etching with 4 x 14 flat iet nozzles. Due to special nozzle pattern,
- Adjustable spray pressure. Upper and lower
- Thermostat with diaital read out and self-
- Integrated rinse zone. Optional fresh watertank
- Drying by squeezing rollers with tissue

DL 500

BUNGARD

Sturdy stand alone construction from PVC

• Line definition down to $35 \,\mu m$ lines and

• Maintenance free design, just normal

Easy disassembly and full access to all

• Suitable for all regular etching agents. We recommend to use ferric-chloride. Please

pay attention to the special features of each

etchant (crystallization of persulfates and

ammonium, exothermic reactions while

etching). For alkaline etching, machine

inner parts without special tools

Transparent top with security switch

spaces on 18 μ m copper

1000W guartz heater

cleaning/refilling

must be modified.

and Titanium

230 V or 400 V, 50 Hz, 1.5 kW Power supply: 1200 x 670 x 1290 mm Dimensions (LxWxH) Etchinaformat 510 mm Tank capacity 55 I 100 kg Weight



there are 6 rows of nozzles for each side !

- spray pressure can be regulated separately
- safe overheat cut-off
- water rinse with solenoid valve or recycle

230 V~, 50 Hz, 1,5 kW 1160 x 770 x 1200 mm 900 mm 300 x 400 mm 1 x 40 I + 1 x 24 I + 3 x 15 I 56 kg



Weight:

Power supply:

Working Level:

Etchingformat:

Tank capacity:

Power supply:

Working Level:

Etchingformat Tank capacity:

Dimensions (LxWxH);

Weight:

Dimensions (LxWxH)

SPLASH CENTER

SPLASH CENTER XL

230 V~, 50 Hz, 1.5 kW

1000 x 670 x 1200 mm

 $1 \times 25 | + 1 \times 9 | + 3 \times 7 |$

900 mm 210 x 300 mm

46 kg



Variants of the DL 500

Variant 1: Spray Developing Machine The DL 500 can be used as a spray developing machine for negative and positive etch resist or solder mask without modifications. Simply change the media!

Variant 2: Spray Etching Machine Standard variant

Variant 3: Spray Stripping Machine This machine is equipped with an additional filter basket at the front side of the machine to remove residues of tenting or solder mask from the stripping liquid (see picture on the left).

Options for the DL 500 Option 1: Recycling Rinsing Tank

Recycling rinsing tank with magnetic centrifuaal pump instead of fresh water. Saves water costs. With a cock drain valve the used rinsing water can be used to compensate evaporation losses or to make up new etching liquid. Waste water free rinsing technique. The magnetic valve from the standard version is here obsolete. The tank fits underneath the machine body of DL 500.

Dimensions (LxWxH): 200 x 700 x 600 mm

Option 2: Conveyorised Rinsing Unit

a.) Conveyorised rinsing unit, stand alone version with adjustable conveyor speed, integrated magnetic valve for fresh water inlet (controlled by DL 500), squeeze drying roller. Transport width and height same as DL 500.

Dimensions (LxWxH): 450 x 620 x 940 mm

b.) As above but second stage cascade rinse (in combination with recycling rinsing tank and magnetic centrifugal pump), 3 way cock valve to bypass rinsing water e.g. to water treatment unit IONEX.

Dimensions (LxWxH): 450 x 620 x 940 mm

Option 3: Inspection Table

Control zone in form of a roller table (not conveyorised). This roller table can be mounted between two DL 500 (e.g. Developer and Etcher), between DL 500 and rinsing unit or as a single exit table.

Dimensions (LxWxH): approx. 620x50x530 mm


Option 4: Production Line


3 DL 500 and the rinsing unit can be connected to a small production line (Developing - Etching - Stripping - Cleaning) coupled together with inspection tables. Of course other variants are possible as well.









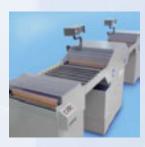



BUNGARD









Option 9: Filter unit

On request you can equip your DL 500 with one or two 10" filter units to remove residues from the etching process. You can easily adjust the filter throughput via cock valve. On the picture you can see a filter unit together with an exit table.



Option 10: Exit table

Option 7: Cooler



Some etching agents as well as other chemicals tend to exothermic reactions and need to

be cooled during the treatment process. For this purpose we offer a special cooler for the DL

500. The Cooler consists of a recycling rinsing tank with cooling coils for the etching liquid.

With a cock valve the etching agent is adjustable bypassed through the cooler.



This machine is equipped with an additional filter basket at the front side of the machine to remove residues of tenting or solder mask from the stripping liquid.





Option 6: DL 500 Vario DL 500 Vario with separate adjustable spray pressure for the upper and lower side. For physical reasons the etching result from the upper side is different from the lower side.

Adjusting the spray pressure for one side may compensate this phenomena. In contrast to etching machines from competitors the PCB in the DL 500 is firmly fixed throughout the whole process by upper and lower transport rollers. This makes it possible to switch off completely the upper nozzles without lifting the PCB by the spray pressure of the lower nozzles.

Option 8: DL 500 triple phases power supply

You can order the DL 500 either with a single phases or triple phases power supply.

Triple phase power supply is recommended for permanent use.



SPRINT 3000

CUSTOMIZED ETCHING SYSTEM FOR YOUR PCB LABORATORY.

The Sprint (3000/4500/6000) series is made for double sided PCBs with line resolution down to better than 0,1 mm. Machine is available as table top or floor standing version. With this range of products, complete production lines are possible covering developing, etching and rinsing including waste water treatment.

Outstanding feature is the transport unit, which is fully removable for cleaning purposes and may be extended or shortened almost arbitrarily, and thus allows custom changes or machine designs. Standard machine has a width of 300 mm (SPRINT 3000) but wider machines are available (450 mm=Sprint 4500 / 600 mm = Sprint 6000).

Technical highlights:

• Small footprint, easy handling, control panel at the front

- Service friendliness: All nozzles with self-adjusting Bayonet Lock: no readjustment!
- Transport: the complete transportation unit can be easily taken out of the machine for cleaning and is based on a maintenance-free bevel gear system (titanium-PP) with horizontal gear shaft
- Transport speed infinetly variable from 0-2m/min
- Short etching time and high etching precision due to high end spray nozzles arranged in nozzle bar
- Machine equipped with filter for etchant
- Titanium heater, controlled by digital thermostate with function control
- Integral closed loop rinse plus fresh water rinse. upon request also with motion dectector
- Clean and easy emptying of all tanks via cock valves
- Security features: cover switch and emergency stop

Possible options:

- Working width: 450 mm / 600 mm for Sprint 4500/6000
- Sensor control for fresh water rinse (motion) control)
- Additional suction hood, swiveling
- Upper / lower pressure adjustable via cog valve
- Additional rinsing sections possible
- Etching zone can be enlarged to 2x / 3x / 4x length
- High pressure pump for rinsing
- Titanium cooling coil, electrically controlled to reduce bath temperature in case of danger of exothermical reaction
- Run dry protection (double security for heater elements)
- Underframe with or without security tray
- Transmitting height up to 10mm (e.g. for pad printing clichees)
- Can be supplied with waste water treatment unit
- Oscillation module possible



Combination of Sprint 3000 and AquaPur 1000







Sprint 3000 + Middle section + Sprint 300

AQUAPUR 1000

WASTE WATER TREATMENT SYSTEM

AquaPur (1000/3000/5000) cleans rinsing water from solids and heavy metals such as copper or iron of small to medium series of PCB production.

The ion exchangers of this system are suitable for alkaline and acidic rinse water from the etching process.

The use of a special mixed bed resin for anions and cations, which can be regenerated, avoids the use of other chemicals e.g. for pH adjustment and ensures easy operation.

The system operates in closed loop circulation and is directly connected to the respective rinsing zones of the etching machine.

The spray pressure and the flow rate can be read and adjusted at the diaphragm valve and the Flow meters.

The contaminated rinse water of the machine flows into a storage tank integrated into the AquaPur.





Power supply: 230 V~, 50 Hz, approx. 1,5 kW 900 x 800 x 1500 mm Dimensions (L x W x H): Working Level: 90 mm Tank capacity: 300 x 400 mm lon exchange columns: 2 x 14 I mixed bed resin Pump pressure approx. 1,8 bar Capacity: 2500 l/h (recommended: 20 l/h) 90 ka Weight:

AQUAPUR 1000

230 V~, 50 Hz, 1,5 kW Power supply: 1100 x 750 x 750 mm Overall size: (L x Wx H): Working width: 300 mm 210 x 300 mm Tank capacity: Tank capacity: 20 | (etchant), 15 | (close loop rinse) Weight: +-95 kg +-80 litre/min Water output: Spray pressure: +-1 bar Working temperature 0 – 45 °C

SPRINT 3000

....



Option: Underframe













Option: Additional suction hood



IONEX A, B, KA, KB

WASTE WATER TREATMENT SYSTEM

The name IONEX stands for ION-EXchanger, which is the very heart of this modern waste water treatment system. The lonex is a modern and compact plant to treat rinsing water of a PCB laboratory. We offer 4 basic variants, which differ in rinsing water throughput and ion capacity. Type A and B are equipped with a cotton pre-filter, two cation columns and a ph neutralization column. Type KA and KB have three ion exchange columns.

The cation columns color red, when loaded with ferric ions and blue/green, when loaded with copper ions. Loading of anion column can be tested by measuring the conductance of the cleaned water. Loaded columns can be sent to Bungard for regeneration or we support you to do the regeneration yourself.

The drain water quality from this system is in accordance to German directives, which are of the highest standards world wide!

- Features:
- For post-treatment of etching and galvanic rinsing water
- · Removal of solids and all heavy metals
- closed water cycle possible (K-versions)
- Decrease of chemical oxygen demand
- · Integrated storage sump with capacity of 110 I (A/KA) or 220 I (B/KB) for collecting rinsing water
- Strong built-in hose pump
- Integrated cotton filter candle 10 μ m (active carbon filter with K-versions)
- Significant change of color when loaded with metals
- Lower and upper sump level control switch
- Easy handling and operation
- Regeneration of ion exchange resins by supplier or by user at little cost
- IONEX A and B perform additionally PH neutralization and discharge to the drain





IONEX A / KA

Power supply:	230 V, 50 Hz, 50 W
Weight:	30 kg
Tank capacity:	1101
Cleaning capacity:	10 I / h
Dimensions (LxWxH):	700 x 430 x 1300 mm

IONEX B / KB

Power supply:	230 V, 50 Hz, 100 W
Weight:	60 kg
Tank capacity:	220
Cleaning capacity:	20 I / h
Dimensions (LxWxH):	900 x 600 x 1500 mm






Latest and updated product specification is published under www.bungard.com C 11/2016 Bungard Elektronik



As an option the IONEX can be equipped with a conductivity meter (IONEX KA/KB) or a ph-meter (IONEX A/B). This way you have the quality of the treated rinse water always under control

IONEX scheme A-B

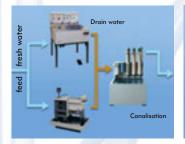

IONEX scheme KA-KB

cleaned dishwate

Of course the machines of the IONEX family can be adapted according to your needs. The IONEX XXL e.g. cleans 1500 l of rinsing water. The IONEX AU filters gold ions out of rinsing water from a nickel-gold-processing machine. These gold ions can be regenerated and returned to the gold bath.





IONEX KA and KB filter next to the metalic cations also the anionic halogens from the rinsing water, so you receive demineralized water. The demineralized water is collected and pumped back to the etching or throughhole-plating machine.



ACCESSORIES FOR YOUR PCB - LAB

Processing Dishes for PCB lab.

Rigid trays suitable for deloping, etching, stripping, immersion tinning.

The trays, which have a spout to facilitate emptying, are available in three sizes.

Insize: 350 x 450 x 75 mm 250 x 320 x 60 mm 210 x 260 x 50 mm

Stripper for positive and negative photoresists



Developer for positive presensitized boards



Developer for negative presensitized boards Sodium persulfate



Immersion tin SUR-TIN

Stain remover RX 3







Chemicals for galvanic through hole plating



FAVORIT

THROUGH-HOLE-PLATING

Hand-operated machine, especially for mechanical through-hole-plating purposes. Professional through-hole-platings by individual tools for each rivet diameter. Optimal contacts, even without soldering. Favorit offers high quality results at a low cost level.

Special features:

- Adjustable depth limiter
- Maximum board size: 400 mm

Extend of delivery:

- The offered system includes complete press + tools
- Inclusive 1 x 1000 rivets
- Inclusive 1 set of tools
- Various tools and rivets are available
- · Please specify the inner diameter you require
- Different tools have to be used for different diameters







FAVORIT

Dimensions (LxWxH): approx. 95 x 300 x 210 mm Working depth: 200 mm Weight: approx. 4 kg

Rivet with inner diameter/mm: 0.4 0.6 0.8 1.0 1.2 1.5 Required drill diameter/mm: 0.6 0.8 1.0 1.5 1.7 2.0



00

VARIODRILL

PCB DRILLING SYSTEM

VARIODRILL is a PCB drilling machine for prototypes and small batch production.

The demand for operating comfort and high quality has led to an untraditional design which meets the necessary requirements for an ergonomic correct working position.

Features:

- comfortable working position, drill table can be tilted up to 30 °
- magnifyer optics directly over the drill hole (parallaxes free)

• Illuminated work area

- Motor controlled, adjustable stroke speed, spindle underneath the table
- Infinitely adjustable 10.000 30.000 RPM
- AC Motor, 100 Watts / 230 Volt
- Including foot switch for easy operating
- Booth hands are free for positioning the PCB
- Complete system with integral dust extraction
- Including external vacuum cleaner
- Throat depth: 115 mm, max. board size 230 mm x endless
 Chuck: 1/8" (3.2mm)
- Drill size 0.6 to 3.2 mm

DRILLS AND ROUTERS

SOLID CARBIDE

High quality, precision ground solid carbide drill and routing bits with 3.175 mm (1/8") shaft.


All tools have 7.5 mm wide collets with a distance of 21 mm from the tip to the upper side of the collet.

The tool rings show the diameter or are colour coded. Tools come in re-usable plastic boxes.

Within one class of price, tools with different diameters can be mixed to give one unit of 10pc.

Tungsten Carbide Drills for drilling PCBs Two flutes, righthand turn. Diameter: 0.3 ... 3.0 mm in 0.1 mm increments


ALLER



Contour Routers - RPU Type

For Aluminium routing/milling. Two flutes, upward swarf ejection, fish tail tipped. Onstock diameters: 0.6, 0.8, 1.0, 1.2, 1.5, 2.0, 2.5, 3.0 mm





Contour Routers - SC/FT Type

For PCB routing, diamant shaped teeth, upward swarf ejection, fish tail tipped. On-stock diameters: 0.6, 0.8, 1.0, 1.3, 1.5, 2.0, 2.5, 3.0 mm

Special tools for isolation milling < 0,6mm SC/FT Router cylindrical: 0.3 , 0.4 und 0.5 mm

Bungard Special isolation milling routers

0.1 and 0.2 mm

These routers are cylindrical only in the last millimetre. This way there is a low risk of breaking the router.



V-Cut Routers G30°N Type

For isolation routing and fine engraving, two flutes, 30° tip angle. For Channels of 0.1 – 0.3 mm width (depending on cutting depth).

Contour Routers G60°N Type

For isolation routing with or for engraving, two flutes, 60° tip angle. For Channels of 0.2 - 0.5 mm width (depending on cutting depth).







 Chuck:
 3.175 mm

 Dimensions (LxWxH):
 340 x 240 x 175 mm

 Weight:
 approx. 7 kg

 Power supply:
 220 V~, 50Hz, approx. 0,6 kW

 + vacuum cleaner

VARIODRILL




CHEMICAL ETCHING OR ISOLATION MILLING

Chemical etching or isolation milling that is an often asked question. Find detailed report here: www.isolationmillina.com

In general: Chemical etching needs a film artwork or a laser direct imaging, but, the etching itself is extremly cheap and thus standard in world wide printed circuit board production.

Isolation milling does not need film artwork, but, generates high tooling costs and some application problems. That is why isolation milling is more for first and single prototypes.


Copper coated alumimium PCBs as normally used in LED applications (Cotherm)

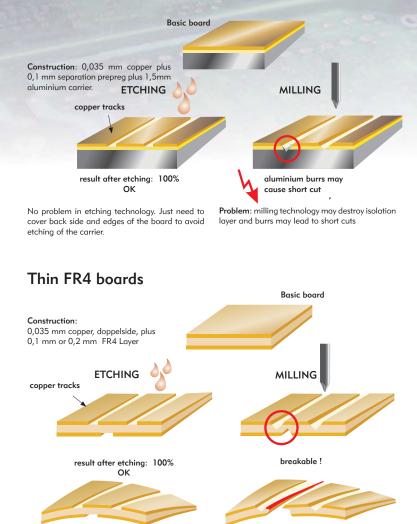

No problem in etching application because FR4 carrier is not effected by etchant.

Problem: V-Scoring effect if two isolation milling channels end up on top of each other.

Multilayer boards with standard prepregs for etching

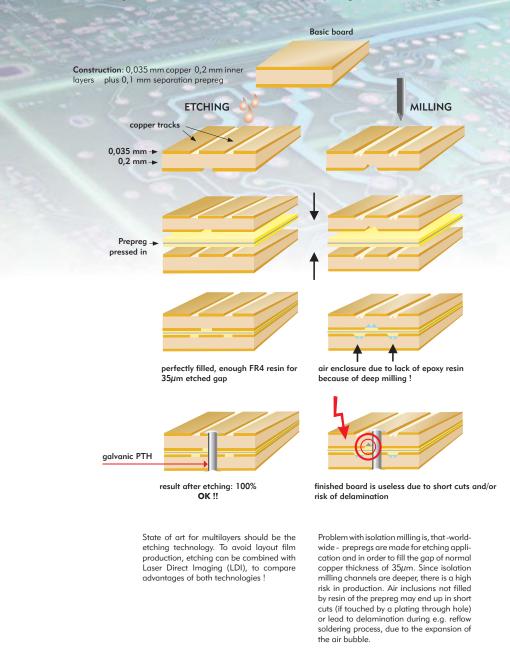

BUNGARD CCD SERIES CNC MACHINES







· •	CCD/2-ECO	CCD 2	CCD/2/ATC	CCD/MTC	CCD/ATC	CCD/MTC/XL	CCD/ATC/XL	CCD/PREMIUM
Weight kg Dimensions mm Work area mm	30 kg 700x550x300 270x325x38	30 kg 700x550x300 270x325x38	30 kg 700x550x300 270x325x38	35 kg 700x800x300 325x495x38	35 kg 700x800x300 325x495x38	49 kg 950x950x300 500x600x38	49 kg 950x950x300 500x600x38	80 kg 700x850x600 400x500x60
Tool change semiautomatic/manual/ 99 tools	yes	yes	yes	yes	yes	yes	yes	yes
fully automatic with length control	not upgradeable not upgradeable	not upgradeable not upgradeable	yes, 16 tools yes	upgradeable upgradeable	yes,16 tools yes	upgradeable upgradeable	yes, 25 tools yes	yes, 30 tools yes
Milling and drilling single-and double-sided PCBs	***	***	***	***	***	***	***	***
Milling/drilling RF- & microwave substrates	☆☆	**	☆☆	☆☆	**	**	$\Delta \Delta$	***
Milling/drilling multilayers with up to 16 layers *	***	***	***	$\Rightarrow \Rightarrow \Rightarrow \Rightarrow$	***	***	***	***
Contour routing of PCBs	***	***	***	***	***	***	***	***
Milling flexible, rigid-flex PCBs **	***	***	***	***	***	***	***	***
Engraving front panels/labels	☆	☆	**	$\Delta \Delta \Delta$	**	***	**	***
Wave solder pallets and Housing production	\bigstar	\$	**	***	$\Delta \Delta$	***	**	***
Milling SMT soldering paste stencils and solder frames	☆	☆	**	***	**	***	**	***
UV-laser-exposure	**	**	**	**	**	**	**	***
Panel cutting, Reworking PCBs	***	***	***	***	***	***	***	***
Test adapter drilling	*	☆	☆	***	***	***	***	***
Cooling	☆	☆	**	x x x	**	***	**	***

*) we generally recommend to etch at least the inner layers of a mulilayer pcb **) for flexible materials vacuum fixation is a nice option

00

BUNGARD CCD/2-ECO

CNC MACHINE

The Bungard CCD/2-Eco completes the Bungard CNC segment for the low price level. The machine is especially interesting for beginners with a low budget, because it has on the one hand an unbeatable price, but on the other hand offers the same mechanic quality and precision of all other Bungard CNC machines.

In opposite to all other CCDs, this machine is equipped with a low-cost eco-spindle which allows speeds from 5000 up to 35000 U / min. For normal everyday work such as isolation milling and contour milling of printed circuit boards, this spindle is highly sufficient. For aluminum and non-ferrous metals however not. Of course the machine can be retrofitted at any time thereafter with a high-speed spindle.


The CCD/2-Eco is a high quality Computer Controlled Drilling machine with semi-automatic tool change. It allows direct processing of Excellon / Sieb & Meyer drill data or HP-/GL data for the production of printed circuit boards (drilling, milling, isolation routing) and milling/engraving of plastics.

In addition to the spindle the Bungard CCD/2-Eco can be upgraded with a dispensing device for solder paste or glue, a laser exposure head for exposing photoresists and a camera for calibration and inspection tasks.

SCOPE OF DELIVERY:

- Mechanic unit + control unit + complete cabeling
- Superb and sturdy high frequency spindle with eddy current brake and load control
- Integrated mechanical milling depth limiter and pressure foot
- Driver software RoutePro3000 (Windows 7[™]-Windows 10[™] - 64bit) for drilling and milling
- Powerful, adjustable (500-2000 W)
 + start adapter for vacuum cleaner (vacuum cleaner not included in delivery)
- Manual, USB/serial adapter, Set of Allen Keys

best choice for prototyping of printed ciruit boards and isolation milling





OPTIONS:

Vacuum table, protection hood or protection rack, converter software IsoCam, fiducial recognition and calibration with camera, laser exposure of photo resists, aluminium work table, routers engine adapter for plastic milling and many more. Upgrade to Kavo high-frequency spindle (this requires: Spindle holder 33mm, spindle 4010, inverter in Al-housing for mounting on the Y-carriage, 8-wire Chainflex control wire).



BUNGARD CCD/2-ECOMTC

30 kg 700 x 550 x 300 mm

- 270 x 325 x 38 mm
- semiautomatic 99 tools

110-240 V, 50-60 Hz +

vacuum cleaner (1500W) (not included in delivery)

5.000 - 35.000

1 – 9000 mm/min

0,0001mm (0,1 μm)

step resolution: Software selectable: 1 mil, $^{1\!/_2}$ mil, $^{1\!/_4}$ mil (= $~6.35\,\mu\text{m})$

0.1mm – 3,175 mm (recommended, bigger tool diameter possible) 20 ppm (0.002%) over the entire work space:

9000/mm/min (=150 mm/s)

9000/mm/min (=150 mm/s), individual setting on a per-tool basis, independent from position speed

5/s (= 9.000 holes/h= 150 holes/min)

Computer

span fixing, clamp fixing, reference pin system, stack processing possible Option: vacuum fixation



Weight:

Work area:

Tool change:

Power supply:

Range of RPM:

Traveling speed: Software resolution:

Tool diameter:

Drill speed:

Board fixation

Position accuracy:

Required accessories:

Maximum position speed per axis:

Maximum working speed per axis:

Mechanical resolution:

Dimensions (LxWxH):

C

ę



CNC MACHINE

The Bungard CCD/2 is a high quality Computer Controlled Drilling machine with semi-automatic tool change. In contrast to the CCD/MTC the CCD/2 has a half sized work area (325×270 compared to 325×495 mm) and an integrated control unit underneath the table.

Compared to the ATC models, the software interrupts the operation during the tool change and the new tool is changed manually (turning the knob changes by a quarter turn; motors remain empowered and hold the position).

The CCD/2 has the same robustness and precision as all the other CCD models. It is ideal as an entry-level model for isolation milling. If you want to operate the CCD/2 with cooling, you need to protect the control unit from the cooling. Please contact us beforehand.

In contrast to all other CCD models, the machine zero point is at the front left. The X axis is the traverse over the table, whereas the Y-axis is located on table level. The CCD/2 can not be converted to automatic tool change. If you possibly want to upgrade at a later time, please contact us before purchase. If necessary we can create a special version for you.

SCOPE OF DELIVERY:

• Mechanic unit + control unit + complete cabeling

- Superb and sturdy high frequency spindle with eddy current brake and load control
- Integrated mechanical milling depth limiter and pressure foot
- Driver software RoutePro3000 (Windows 7[™]-Windows 10[™]-64bit) for drilling and milling
- Powerful, adjustable (500-2000 W) vacuum cleaner + Start adapter for vacuum cleaner
- Manual, USB/serial adapter, Set of Allen Keys





Picture of optional camera and LDI

Available options:

Protective hood, CAM / Isolation software, monitor + camera, cooling device, compressor, etc.

Explains: MTC = Manual Tool Change ATC = Automatic Tool Change



Picture shows rollrack

BUNGARD CCD/2

30 kg 700 x 550 x 300 mm 270 x 325 x 38 mm semiautomatic 99 tools 110-240 V, 50-60 Hz + vacuum cleaner (1500W) 30.000 - 63.000 1 - 9000 mm/min 0.0001 mm $(0.1 \mu m)$ step resolution: Software selectable: 1 mil, ½ mil, ¼ mil (= $6.35 \,\mu$ m) 0.1mm - 3,175 mm (recommended, bigger tool diameter possible) 20 ppm (0.002%) over the entire work space: 9000/mm/min (=150 mm/s) 9000/mm/min (=150 mm/s), individual setting on a per-tool basis, independent from position speed 5/s (= 18.000 holes/h= 300 holes/min)

Computer span fixing, clamp fixing, reference pin system, stack processing possible Option: vacuum fixation



Videoclip of

Bungard CCD

Weight:

Tool change:

Power supply: Range of RPM:

Traveling speed:

Tool diameter

Drill speed:

Board fixation

Position accuracy:

Required accessories:

Maximum position speed per axis:

Maximum working speed per axis:

Software resolution:

Mechanical resolution:

Dimensions (LxWxH): Work area:

BUNGARD CCD/2 ATC SC

CNC MACHINE

0000000

Our

00

The Bungard CCD/2/ATC is a high quality Computer Controlled Drilling machine with automatic tool change. The CCD/2/ATC differs from the CCD/ATC by a half sized working area (325×270 mm).

The CCD/2/ATC is ideal for users, who do not have enough space to run an ATC machine..

- SCOPE OF DELIVERY:
- Mechanic unit + control unit + complete cabeling
- Superb and sturdy high frequency spindle with eddy current brake and load control
- Integrated mechanical milling depth limiter and pressure foot
- Driver software RoutePro 3000 (Windows 7[™]-Windows 10[™]-64bit) for drilling and milling
- Powerful, adjustable (500-2000 W) vacuum cleaner + start adapter for vacuum cleaner
- Manual, USB/serial adapter, Set of Allen Keys
- ATC: Air hose

Available options: Protective hood, CAM / Isolation software, monitor + camera, cooling device, com-

pressor, etc. Explains:

MTC = Manual Tool Change ATC = Automatic Tool Change





BUNGARD CCD/2 ATC

30 kg 700 x 550 x 300 mm 270 x 325 x 38 mm 16 automatic / semiautomatic 99 tools 110-240 V, 50-60 Hz + vacuum cleaner (1500W) 3.000 - 63.000 1 - 9000 mm/min 0,00001mm (0,01µm) step resolution: Software selectable: 1 mil, ½ mil, ¼ mil (= $3,175 \,\mu$ m) 0.1mm - 3,175 mm (recommended, bigger tool diameter possible) 20 ppm (0.002%) over the entire work space: 9000/mm/min (=150 mm/s) 9000/mm/min (=150 mm/s), individual setting on a per-tool basis, independent from position speed

5/s (= 18.000 holes/h= 300 holes/min)

Computer

span fixing, clamp fixing, reference pin system, stack processing possible Option: vacuum fixation



Weight: Dimensions (LxWxH):

Work area: Tool change:

Power supply: Range of RPM:

Traveling speed:

Tool diameter:

Drill speed:

Board fixation:

Position accuracy:

Required accessories:

Maximum position speed per axis: Maximum working speed per axis:

Software resolution:

Mechanical resolution:

BUNGARD CCD MTC

CNC MACHINE

The Bungard CCD/MTC is a high quality Computer Controlled Drilling and milling machine with semi-automatic tool change (MTC = manual tool change).

The CCD/MTC differs from the CCD/2 by a larger working area (325x495mm in contrast to 270x325mm) and by a separate controller.

Compared to the ATC models, the software interrupts the operation during the tool change and the new tool is changed manually (turning the knob changes by a quarter turn; motors remaine empowered and hold the position).

With the sturdy spindle and the good fixation of the tool in the chuck the Bungard CCD / MTC is perfectly fitted for routing or engraving plastics, aluminium and other metals. 19 inch rack boards can also be processed.

SCOPE OF DELIVERY:

pressure foot

• Mechanic unit + control unit + complete cabeling

eddy current brake and load control

• Superb and sturdy high frequency spindle with

• Integrated mechanical milling depth limiter and

Driver software RoutePro 3000 (Windows 7[™]-

Windows 10[™]-64bit) for drilling and milling

• Powerful, adjustable (500-2000 W) vacuum

cleaner + start adapter for vacuum cleaner

• manual, USB/serial adapter, Set of Allen Keys

best choice for printed circuit boards and frontpanel production

Available options:

Protective hood, CAM / Isolation software, monitor + camera, cooling device, compressor, etc.

Explains:

MTC = Manual Tool Change ATC = Automatic Tool Change





Option: Camera

BUNGARD CCD MTC

Weight:	35 kg
Dimensions (LxWxH):	700 x 800 x 300 mm
Work area:	325 x 495 x 38 mm
Tool change:	semiautomatic 99 tools
Power supply:	110-240 V, 50-60 Hz + vacuum cleaner (1500W)
Range of RPM:	3.000 - 63.000
Traveling speed:	1 – 9000 mm/min
Software resolution:	0,00001mm (0,01µm)
Mechanical resolution:	step resolution: Software selectable: 1 mil, 1/2 mil, 1/4 mil (= 3,175 $\mu m)$
Tool diameter:	0.1 mm – 3,175 mm (recommended, bigger tool diameter possible)
Position accuracy:	20 ppm (0.002%) over the entire work space:
Maximum position speed per axis:	9000/mm/min (=150 mm/s)
Maximum working speed per axis:	9000/mm/min (=150 mm/s), individual setting on a

9000/mm/min (=150 mm/s), individual setting on a per-tool basis, independent from position speed

5/s (= 18.000 holes/h= 300 holes/min)

Computer

span fixing, clamp fixing, reference pin system, stack processing possible Option: vacuum fixation

Videoclip of

Bungard CCD

Drill speed:

Board fixation:

Required accessories:

0

00

-

BUNGARD CCD ATC

CNC MACHINE

The Bungard CCD/ATC is a high quality Computer Controlled Drilling machine with Automatic Tool Change (ATC).

The ATC as well as all other CCDs allows directly processing of Excellon / Sieb&Meyer drill data or HP/GL route data for producing pcbs (drilling, cutout-routing, isolation milling) or routing/engraving plastics, aluminium and other metals.

The CCD/ATC differs from the CCD/MTC by the automatic 16-slot tool changer. The work space is the same. Compared with the CCD/2 the ATC has a larger work space (325x495mm in contrast to 270x325mm with the CCD/2) and a separate control unit.

The ATC is ideal for big and more complex PCBs with many different drill sizes. 19 inch rack boards can also be processed.

SCOPE OF DELIVERY:

- Mechanic unit + control unit +
- complete cabeling

 Superb and sturdy high frequency spindle with
- eddy current brake and load control Integrated mechanical milling depth limiter and pressure foot
- Driver software RoutePro 3000 (Windows 7TM-Windows 10TM-64bit) for drilling and milling
- Powerful, adjustable (500-2000 W) vacuum cleaner + start adapter for vacuum cleaner
- Manual, USB/serial adapter, Set of Allen Keys
- ATC: Air hose

best choice for PCB production in large quantities



Available options:

Protective hood, CAM / Isolation software, monitor + camera, cooling device, compressor, etc.

Explains:

MTC = Manual Tool Change ATC = Automatic Tool Change



BUNGARD CCD ATC

35 kg 700 x 800 x 300 mm 325 x 495 x 38 mm 16 automatic / semiautomatic 99 tools 110-240 V, 50-60 Hz + vacuum cleaner (1500W) 3.000 - 63.000 1 – 9000 mm/min 0,00001mm (0,01µm) step resolution: Software selectable: 1 mil, 1/2 mil, 1/4 mil (= $3,175 \,\mu$ m) 0.1 mm - 3,175 mm (recommended, bigger tool diameter possible) 20 ppm (0.002%) over the entire work space: 9000/mm/min (=150 mm/s) 9000/mm/min (=150 mm/s), individual setting on a per-tool basis, independent from position speed

5/s (= 18.000 holes/h= 300 holes/min)

Computer

span fixing, clamp fixing, reference pin system, stack processing possible Option: vacuum fixation



Weight:

Work area:

Tool change: Power supply:

Range of RPM: Traveling speed:

Tool diameter:

Drill speed: Required accessories:

Board fixation

Position accuracy:

Maximum position speed per axis: Maximum working speed per axis:

Software resolution:

Mechanical resolution:

Dimensions (LxWxH):

Ó

BUNGARD CCD XL MTC

CNC MACHINE

The Bungard CCD/MTC is a high quality Computer Controlled Drilling and milling machine with semi-automatic tool change (MTC = manual tool change).

The CCD/MTC XL differs from the CCD/MTC by a larger working area (500x600mm in contrast to 325x495mm).

Compared to the ATC models, the software interrupts the operation during the tool change and the new tool is changed manually (turning the knob changes by a guarter turn; motors remaine empowered and hold the position).

With the sturdy spindle and the good fixation of the tool in the chuck the Bungard CCD/MTC XL is perfectly fitted for routing or engraving plastics, aluminium and other metals. 19 inch rack boards can also be processed.

SCOPE OF DELIVERY:

• Mechanic unit + control unit + complete cabeling

- Superb and sturdy high frequency spindle with eddy current brake and load control
- Integrated mechanical milling depth limiter and pressure foot
- Driver software RoutePro 3000 (Windows 7[™]-Windows 10[™]-64bit) for drilling and milling
- Powerful, adjustable (500-2000 W) vacuum cleaner + start adapter for vacuum cleaner
- Manual, USB/serial adapter, Set of Allen Keys



panel production



Protective hood, CAM / Isolation software, monitor + camera, cooling device, compressor, etc.

Explains:

MTC = Manual Tool Change ATC = Automatic Tool Change



BUNGARD CCD XL MTC

Weight: Dimensions (LxWxH): Work area: Tool change: Power supply: Range of RPM: Traveling speed: Software resolution: Mechanical resolution:

Tool diameter:

Position accuracy: Maximum position speed per axis:

Maximum working speed per axis:

Drill speed: Required accessories: Board fixation:

49 kg 950 x 950 x 300 mm 500 x 600 x 38 mm semiautomatic 99 tools 110-240 V, 50-60 Hz + vacuum cleaner (1500W) 3.000 - 63.000 1 – 9000 mm/min 0,00001mm (0,01µm) step resolution: Software selectable: 1 mil, 1/2 mil, 1/4 mil (= $3,175 \,\mu$ m) 0.1 mm - 3,175 mm (recommended, bigger tool diameter possible) 20 ppm (0.002%) over the entire work space: 9000/mm/min (=150 mm/s) 9000/mm/min (=150 mm/s), individual setting on a per-tool basis, independent from position speed 5/s (= 18.000 holes/h= 300 holes/min) Computer

span fixing, clamp fixing, reference pin system, stack processing possible Option: vacuum fixation



Page 44

BUNGARD CCD XL ATC

CNC MACHINE

The Bungard CCD/ATC/XL is a high quality Computer Controlled Drilling machine with Automatic Tool Change (ATC)

The ATC/XL as well as all other CCDs allows directly processing of Excellon / Sieb&Meyer drill data or HP/GL route data for producing PCBs (drilling, cut-out-routing, isolation milling) or routing/ engraving plastics, aluminium and other metals.

The CCD/ATC/XL differs from the CCD/MTC/XL by the automatic 25-slot tool changer. The work space is the same.

Compared with the CCD/ATC the XL has a larger work space (500x600mm in contrast to 495x325mm with the CCD/ATC) and the number of tool slots (25 instead of 16).

The ATC is ideal for very big and complex PCBs with many different drill sizes and for special applications.

SCOPE OF DELIVERY:

- Mechanic unit + control unit + complete cabeling
- Superb and sturdy high frequency spindle with eddy current brake and load control
- Integrated mechanical milling depth limiter and pressure foot
- Driver software RoutePro 3000 (Windows 7[™]-Windows 10[™]-64bit) for drilling and milling
- Powerful, adjustable (500.-2000 W) vacuum cleaner + start adapter for vacuum cleaner
- Manual, USB/serial adapter, Set of Allen Keys
- · ATC: Air hose



best choice for PCB production in large quantities

Available options:

Protective hood, CAM / Isolation software, monitor + camera, cooling device, compressor, etc.

Explains:

MTC = Manual Tool Change ATC = Automatic Tool Change

BUNGARD CCD XL ATC

49 kg

950 x 950 x 300 mm 500 x 600 x 38 mm 25 automatic / semiautomatic 99 tools 110-240 V. 50-60 Hz + vacuum cleaner (1500W) 3.000 - 63.000 1 – 9000 mm/min 0,00001mm (0,01µm) step resolution: Software selectable: 1 mil, 1/2 mil, 1/4 mil (= $3,175 \,\mu$ m) 0.1 mm - 3,175 mm (recommended, bigger tool diameter possible) 20 ppm (0.002%) over the entire work space:

C

9000/mm/min (=150 mm/s)

9000/mm/min (=150 mm/s), individual setting on a per-tool basis, independent from position speed

5/s (= 18.000 holes/h= 300 holes/min) Computer

span fixing, clamp fixing, reference pin system, stack processing possible Option: vacuum fixation



Videoclip of

Bungard CCD

Weight:

Work area: Tool change:

Power supply: Range of RPM:

Traveling speed:

Tool diameter:

Drill speed: Required accessories:

Board fixation:

Position accuracy:

Maximum position speed per axis:

Maximum working speed per axis:

Software resolution: Mechanical resolution:

Dimensions (LxWxH):

Page 47





- 300 W spindle
- Stepper motor torque adjustable via software

BUNGARD CCD

CNC PREMIUM MACHINE

An international trendsetter on the world market for printed circuit board production is the **Bungard**

It combines all available highlights, required in a

modern PCB lab, to a fully equipped CNC center.

• 32 Bit chip technologie for extremly quick

communication under Windows 8[™] (or higher)

• High precision aluminium table, double sided

overmilled, for about zero height tolerance

• Highest possible speed of 22m/minute

• Extremly high step resolution of 1 μm.

• Direct USB Port for easy installation

PREMIUM

CCD PREMIUM.

Details:

- 30 tool boxes for automatic tool change
- Tool length measurement and calibration incl. tool break control
- Integral pressure foot and depth limiter system
- Dust extraction with autostart function via software
- Rollrack with transparent doors with security switches

Standard software supplied with the system:

- Software resolution 0, 1μm
- LOG files for perfect and automated online support.
- ROUTEPRO 3000 inclusive all modules:
- Plus 3000LaserPro 3000
- DispPro 3000
- Dokument 3000
- Calibrate 3000
- Inspect 3000

Technical details/requirements:

- Power supply: 90-250 V AC /47-63 Hz or 124-370V DC (without options and dust extraction) Compressed air: 6 bar, +- 40 liter/minute
- Dimensionen machine: +- 800 x 950 x 600 mm Weight machine: +- 80 kg
- Dimensionen rack: +- 900 x 1100 x 1600 mm Weight rack: +- 100 kg

Available options:

- Laser head for LDI
 - Dispenser
- Super silent compressor
 - Chiller for spindle in heavy use

Coming soon:

- Version with 60.000 1/min spindle
- Remote control of system via smart phones
- Vacuum table
- Note: Computer does not belong to scope of delivery.

For latest details scan QR-Code or look at BUNGARD website:











CCD ACCESSORIES

HARDWARE

Mitthind

The CCD is extensible through a variety of options, such as:

Protective hood, CAM/Isolation software, monitor + camera, cooling device, compressor, etc.

SOFTWARE

Bungard standard software RoutePro3000 can be expanded with additional software modules, such as::

LaserPro 3000, DispPro 3000, Calibrate 3000, Inspect 3000, Document 3000 or Plus 3000




On request the CCD is delivered with a vacuum table.

mmmmmm



For dust and noise protection we offer soundproofing hoods and racks.

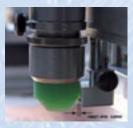

Optional enhanced dust extraction system (instead of standard nozzle) offers


- higher efficiency
- lower noise
- more effective travel height

Pressure foot for drilling and routing.



One integral part of the CCD is to keep it multifunctional.

Exchanging the high frequency spindle with a pen plot adapter changes the CCD into an A3 Pen plotter.




To work directly with your Bungard CCD, some accessories are required. For our new customers we arranged a starter kit according to our experience.





The USB camera will allow optical inspection of your board.



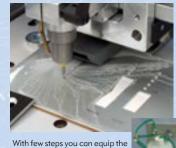

With few steps you can equip the CCD with a coolant supply.

Page 50

ROUTEPRO 3000

00000000

00

TOP EQUIPMENT: SERIES OR UPGRADE THE CNC SOFTWARE-PLATFORM



Designed as software package for all BUNGARD CCD CNC systems (later than 2006),

RoutePro 3000 integrates all standard functionality of previous Bungard software platforms such as:

- Drilling and routing of circuit boards
- Isolation milling and engraving
- Routing and engraving of front panels and housings
- Production of SMD templates

in a free of charge basic tool. This basic functionality may be upgraded at any time to various other applications by these interesting

MODULES:

- Plus 3000 for up to 32 layers at a time
- LaserPro 3000 for laser direct imaging of photoresists
- DispPro 3000 for line and dot dispensing and filling
- Document 3000 for work protocol as .pdf document
- Calibrate 3000 for fiducial recognition with camera
- Inspect 3000 for automated optical inspection (AOI)



For detailed description see following pages.

The design concept of Routepro 3000 computeraided manufacturing (CAM) tool is to operate the BUNGARD CNC hardware. This will enable you to run the software on your CAD computer in your R&D department or on any other separate computer in a production plant. As you like.

That meets the requirements of the modern workplace. The designer can finish the prototype straight away himself or start the next CAD job, e.g. with ISOCAM 5.0 and pass the PCB production to a machine operator. That way your Bungard CCD in combination with Routepro 3000 is used for large scale production of printed circuit boards.

You will be supported by a wizard that leads through the project and of course by an online help function.

FEATURES:

- · Modern optics with Windows 7 ribbon bar, floating or docking windows
- Machine and tool parameters are stored job related
- A wizard ensures that all tools are properly provided with parameters
- · Tool parameters can be stored according to material and router or drill type
- Language module for easy translation
- Machine configuration graphically interactive
- In the standard RoutePro3000 up to 4 files are read in at the same time; e.g. reference holes, drill file, milling file top and milling file bottom.
- Detailed online help with step-by-step instructions
- Units can be switched from inches to metric
- Log files for easy online support !

configurable.

• All parameters (speeds, scaling, offset, etc.)




- Spindle speed setting by software from 30000-63000 1/min (5.000 - 100.000 1/min for CCD Premium)
- Inclusive spindle guick stop
- Support of manual tool change (MTC) or automatic tool change (ATC)
- Drilling and routing diameters > 0.1 mm
- Driver software for Excellon, Sieb & Meyer or HP / GL data on Windows XP Windows 8 (32 - or 64-bit) with convenient user interface
- · Improved tool-statistics with parameters for up to 99 tools
- Screen presentation of milling vectors and drill holes
- Selection of vectors to be processed + drill holes using the mouse on the screen
- Working progress indicator on the screen
- Milling and drill files can be simultaneously loaded and executed successively by simply switching the file.
- · Real-time capability with handshake on work progress for controlled operation and stops.
- In combination with optional USB CAMERA, picture is displayed on the computer screen with a crosshairs target.
- For upgrade of machines elder than 2006, we can convert the controller of the CCD.

CCD OPTIONS



features:



- You may load up to 32 layers per project !
- In the Wizard you may select the type of project, depending on your selection, the project will be stored under the project type name. This can be useful to separate
- projects meant for PCB or stencils etc. You may position the machine by moving and clicking with the mouse in the camera screen. It will also try to center the drill hole. This can be useful if you want to capture the holes from an existing PCB.
- Under the tab GENERAL you may set the origin of your material. This can be the zero position of machine but can also be calculated from the material position.

- Under the Views tab you now have the following extra' s:
- Show material
- · Set the intensity of the line grid
- · Set the intensity of the dot grid
- · Set the intensity of the table view
- Show the mounting holes
- Show the ATC tool-slots and depth sensor
- Under the Help tab you'll find two buttons to open the location of the current project and the documentation.





ilittlind.



CCD OPTIONS

LaserPro 3000 **Bungard Laser Modul**

The Bungard laser unit is an add-回熟新活 on-item for the Bungard CCD to expose photoresists, solder masks and Alucorex. The laser is mounted into the spindle holder instead of the high frequency spindle and is controlled by the RoutePro 3000 software.




LASERPRO 3000

Laser class:	class 3B
Power:	120mW
Dimensions (LXBXH	l): 47 x 47 x 110 mm
Safety:	
Magnetic safety sw	vitch, laser turns on only when laser
is mounted facing	down into the CCD holder
PVC housing	
Power connection:	Via Bungard CCD
Application:	Via Bungard CCD/RoutePro3000



The Bungard laser exposure unit is an answer to the demand of many operators for higher precision, faster processing speeds and reduced tool costs compared to other technoligies as for example isolation milling.

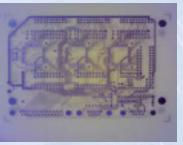

Calibrate 3000 **Bungard Calibration Module**

With the calibration module, you can visually calibrate the position of your board. The

software moves and rotates the board according to the actual position of the calibration marks or registration holes.

同志恐ぶ同

For this purpose, the machine automatically drives to certain fiducial registration points on the layout and the user centers the cross mark of the camera over the mark and acknowledges the position. Registration holes can be easily inserted e.g. with IsoCam. Height calibration is also possible with the help of standardized templates.


The calibration function is useful if you e.g. do not want to work with reference pins for double-sided boards, or the board has been changed by other process steps (pressing multilayer, galvanic through hole plating), so the reference pins may lead to inaccuracies.

Another typical application is the rework, e.g. if after components assembly the circuit board can no longer be fixed with reference pins to the base.

Rework could also be:

 You received a board from a customer and the adjustment holes of the board are too small and you need to drill them with a bigger tool

- You have a dispense unit installed and want to calibrate the PCB, so the dots will be placed correctly
- You want to cut a hole in a PCB that was already finished.
- You want e.g. calibrate a possible offset between drilling-/milling spindle to a dosing needle or the laser exposure head.



CALIBRATE 3000

Fiducial recognition for PCB inspection, Machine calibration Camera with USB-cable, holder to connect camera to CCD, possibly an active usb-extension is needed. This is not part of delivery. HD-Video with 720p, Autofocus, high precision lens with glass elements delivers sharp image quality, TrueColor-Technology, automatic exposure for brilliant videos in vivid colours. HD video recording at 720p, records up to 30 pictures per second in real HD quality. Clear Frame-Technology: exceptional even in low light conditions for smooth, detailed videos Optimized for Windows 8. Quick set-up, no driver installation required. Windows 8, Windows 7, Windows Vista, Windows XP (SP2) or higher (exception Windows XP 64-Bit)

At least: Intel Dual-Core 1,6 GHz or higher , 1 GB RAM. Recommended: Intel Dual-Core 3,0 GHz or higher, 2 GB RAM USB 2.0, Hard disc: 1,5 GB of free storage

DispPro 3000 **Bungard** Dispensing Module

The dispensing module DispPro 3000 is an extension of the CCD for dispensing solder paste or glue.

Instead of being controlled by a foot switch, a pneumatic manual dispensing unit is controlled over the software modul DispPro 3000. A dosing cartridge of the dispenser is mounted into the holder of the high-frequency spindle.

The module is not a fully automatic dispensing unit, but a dosing aid for a manual dispenser.

The machine drives precisely to each dosing point


DISPPRO 3000

Dimensions:	220 x 210 x 67 mm
Weight:	1 kg
Input Voltage:	100 – 240 VAC
Internal Voltage:	24 VDC
Air inlet:	5-7 bar
Air outlet:	0,1-7 bar
Hold back vacuum:	Non-Drop System
Control:	Via Bungard CCD/RoutePro3000
Requirements:	Bungard CCD
	Dispensing license DispPro3000
	for Route-Pro3000
	connection to compressed air
Application:	Dosing of solder paste and glue



and dosing time dosing height are precisely controlled.

Further settings like viscosity control and control of the dosing volume are not supported. The control of these parameters is subject to the user.

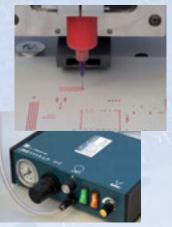

Inspect 3000 **Bungard Inspection Modul**

With this module you can use a Bungard


CCD for AOI-drives (Automatic Optical Inspection).

If you have started Inspect3000, the machine will travel to the first drill position and waits there, so you have time to look at this position closely. If you press start, the next position will be shown.

Note: This function will only work on drill layers



Latest and updated product specification is published under www.bungard.com © 11/2016 Bungard Elektronik



Application

Features

Scope of delivery:

System requirements:


Bungard Documentation Module

This documentation module will provide outstanding documentation which you can use for future reference.You may also handout the project documentation to your customer along with

the finished boards. When the documentation module is activated

you'll find a new button under options: PDF

Pressing this button will generate a complete PDF document, containing all the machine settings. This includes activated licenses, correction factors, serial numbers, tool defaults for routers, drills, laser and dispense tools and many more.

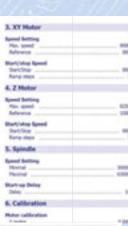





Latest and updated product specification is published under www.bungard.com C 11/2016 Bungard Elektronik

PROCESS CONTROL AND AUTOMATIC OPTICAL INSPECTION

QUALITYSCAN 3000

What is QualityScan 3000?

QualityScan 3000 is a fully integrated, stand-alone process control, measurement and inspection workstation for use in many applications in multiple industries.

QualityScan 3000 uses a PC Windows based software package integrated with a highresolution, calibrated, A3 size flatbed scanner. This combination allows for inspection of parts at virtually any stage of production. Parts can be inspected versus Gerber data, CAD data or Golden parts.

Benefits:

....

- Catch problems BEFORE production floor -"Virtual problem"
- Catch problems DURING production "Sampling for SPC"
- Eliminate REWORK
- Environmentally friendly
- · Maximize existing capital investment

DUNGRIDO

• Reduce operator, engineer & management stress

Why QualityScan 3000?

- QualityScan 3000 systems are the standard in the industry for PCB/stencil/emulsion screen/film inspection – it's the leading system in the world!
- Inspection is needed It is not acceptable to ship or use defective parts!
- QualityScan 3000 is the lowest cost complete inspection system in the industry
- 100% inspection of part using CAD data or a Golden Part
- Inspect a wide variety of features on a single system... multi purpose
- Inspection of parts in any material including FR4, Polyamide, Rodgers, Thermount.
- Or plastic, paper, diazo, glass, chrome, electroform, stainless, silicon, etc
- Systems are very easy to use and based on a standard PC platform
- Optionally, create or modify CAD data to match existing parts when data is lost

×

Working Option - Components Program





CALIFORNIA, DESCRIPTION NAME OF DESCRIPTION

In the part of the last of the second s

May' along the little in storage of any we

té 🖻 11-2

tob many tamphotob

imperior the 1.1 state

12 13

No. of Concession, Name of Street, or other and a start



And Mark Approach (1986)

18

(10.19 - Poster of Series in Paster's VCP advers


Future to a later plane produce of Carbon on Name day

Fash & Tractor - used for regarding features will come

and he insurating ladgest families








Power consumption: 2.8 W (Low modus) 0.5 W (Standby) 656 x 458 x 158 mm 2400 dpi x 4800 dpi 3.8 Dmax approx. 14.5 kg

45 W

-



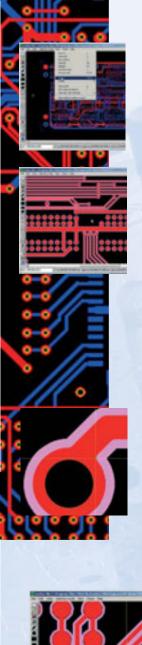

DATA CONTROL CONVERSION

ISOLATION MILLING



You designed a PCB with your CAD package and now want to make a prototype or a small series by etching or by isolation milling.

IsoCAM 5.0 for Win XP....Win7 64 bit offers updated hardware drivers with improved dongle management. We recommend all existing IsoCAM users (that have a dongle = user identification already) to upgrade their system to this standard.

(Find download full version and demo version (for new users) on our website).

The questions:

- How do you check and correct the drill-, route- and plot-data, their dimension and layer registration?
- Do you want to make your prototype by isolation milling?





- IsoCAM reads your Gerber, HPGL and drill files. It offers you editing facilities like shift, mirror, copy, paste, delete and more on single vectors, groups of elements or entire layers.
- IsoCAM can convert data into all of the above mentioned formats. Windows Postscript output allows making film artworks.
- IsoCAM comes with a worthy isolation milling converter with the feature of using two different tools in once and with the possibility of creating copper rubout areas.
- The aperture table and the tool rack can be edited, saved and printed. A converter automatically reads the aperture information from most CAD packages.
- Optional up-grade to ISOCAM PRO enables to load .bmp and .dxf files

SOCAM

IsoCAM 5.0

ISOCAM®	STANDARD	PRO
Gerber input / output (standard/extended)	YES	YES
HPGL input / output	YES	YES
Excellon output for milling data	NO	YES
DXF input / output	NO	YES
Bitmap input /output	NO	YES
Drill input / output	YES	YES
G-code output	YES	YES
ARC optimize	NO	YES
Scaling	NO	YES
Scale / auto-rotate bitmap	NO	YES
Auto detect drill holes in bitmap	NO	YES
Save Job file	YES	YES
Create milling data	YES	YES
Create milling data using two tools	YES	YES
Create milling data for selected object	NO	YES
Undo/Redo	YES	YES
Max. number of layers	32	64
Units: Mils / mm / Inch / HPGL	YES	YES
Design rules checker	YES	YES
Show milling direction	NO	YES
Change milling direction	NO	YES
Change starting point of milling chain	NO	YES
Select whole milling chain	NO	YES
Create solder mask	NO	YES
Snap to nearest endpoint	YES	YES
Auto synchronize layers	YES	YES
Add fixing holes	YES	YES
Create rub outs	YES	YES
Create board cuts	YES	YES

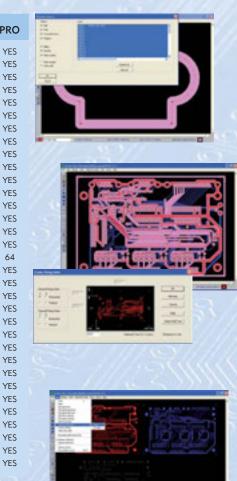

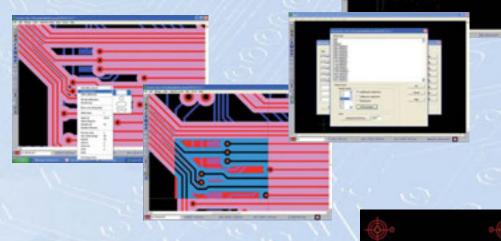

YES

YES

YES

NO

Mirror-function

Add objects

Powerfill zoom function

Select complete net

Annual

СОМРАСТА 30

THROUGH-HOLE-PLATING LINE

This machine from the COMPACTA-series was consequently designed to meet the demands of professional direct metallization.

It can take boards up to $210 \times 300 \text{ mm}^2$ and has 5 treatment tanks (cleaning - pre-dip - catalyst - intensifyer - reserve tank) and one galvanic plating tank.

Two treatment tanks are thermostatically controlled and equipped with a teflon heater.

Bath movement on all tanks is performed with DCgear motor. The stroke speed is stepless variable.

The galvanic plating tank comes with an integrated air injection and a stepless regulated rectifier. A Volt- and an Amperemeter show the current electric values.

DUNGAND

Picture of COMPACTA 30

Special emphasis was put on a unique rinsing technique. A double cascade rinse and a spray rinse, the latter activated via foot switch and a magnetic valve, are integral parts of the COMPACTA 30.

We also offer the COMPACTA as a complete system including chemicals, anodes, anode holders and board holders.

	COMPACTA	30
Tank	treatment	galvanic
dimensions	tanks	copper tank
Length:	400 mm	400 mm
Width:	100 mm	275 mm
Depth:	300 mm	300 mm
Capacity:	10 l	30 l
Total size (LxWxH): 880 x 1000 x 1350 mm		

 Working level:
 950 mm

 Weight:
 approx. 80 kg

 Heaters:
 2 × 400 W

 Rectifier:
 1 × 6 V, 40 A

 Bath movement:
 DC-gear motor

 Power supply:
 23 V, 50 Hz, 6.3 A

COMPACTA 40 2CU

THROUGH-HOLE-PLATING LINE

Based on the same principle of construction as our Compacta 30 series, the Compacta 40 2CU is optimized for higher productivity. You can manufacture boards with a maximum size of 300 x 400 mm². This enlargement plus an integral, second plating bath leads to almost 4 times higher daily throughput with only little more space requirements.

Based on the COMPACTA-series we also produce machines for other chemical systems.

DUNGRRD

Alternatives for improved surface qualities:

Bungard is also experienced in galvanic nickelgold-systems for long lasting, bondable surface quality. Moreover tin-, blackening- or sealbond-systems are available. Contact us for your individual, customized solution.

Tank galvanic treatmen dimensions tanks copper tank 500 mm Length: 500 mm Width: 100 mm 300 mm Depth: 450 mm 450 mm 201 601 Capacity:

COMPACTA 40 2Cu

otal size (LxWxH):	1200 x 1180 x 1390 mm
Vorking level:	950 mm
Veight:	approx. 130 kg
leaters:	2 x 800 W
lectifier:	2 x 6 V, 80 A
ath agitation:	DC gear motor
ower supply:	230 V, 50 Hz, 2,5 kW

Picture of COMPACTA 40 2CU



LM 419 1

HENR CONTROL

Max. Panel Size:

finished PCR-

Tank capacity

Power supply:

Rectifiers:

Heaters:

Water in:

Water out:

Page 62

Recommended max

Dimensions (LxWxH):

PROFI 2530 + 3045

COST-CUTTING ALTERNATIVE OF THROUGH-HOLE-PLATING

Features

- Only 4 process functions, plus plating, (one spare bath for additional requirements).
- · Bath movement for all tanks and no need for complicated reverse pulse plating
- Wide window of operation
- Direct plating process chemistry, successfully used world wide
- None of the nasty chemicals associated with other plating systems, (e.g. no Formaldehyde)
- Line time less than one hour half that of other systems. Stable chemistry even when used irregularly
- Minimum analysis mostly done by replenishment (no specialist operator required)

- Very compact equipment ideal for use where space is limited
- Solid state controls, dual current output plating timer - re-settable amp/hour counter

Our plating system is made for the production of high quality prototype and production quantities of plated phrough pole boards. The process has none of the complexities of older style methods of production which are both time consuming and require expensive monitoring of processes on a daily basis.

The heart of the system is our patented chemistry (DPP = direct plating process) which has only four steps to prepare a panel to be electrolytically plated. Analysis of the chemistry is minimal and very simple. The Plating Lines feature electrolytic plating power supplies with controllers with membrane touch pad and digital read out meters to set volts, current, plating time and amp hours.

PROTEC 2030 + 3040

IMMERSION TIN FOR PERFECT LEAD-FREE SOLDERING

The PROTEC SN is a professional equipment for the production of final surfaces of printed circuit boards. The machine includes all necessary tanks and electrical equipment in a very compact design.

GUNGARD

PROTEC SN with the ORMECON®-process quarantees:

- Planar surface for SMD technology
- Pure tin deposit, even with high copper load of the bath
- Significant reduction of diffusion velocity
- Multiple soldering possible, even with intermediate storage
- Improved temperature resistance

The design of the PROTEC SN enables to extend or reduce the equipment depending on the requirements e.g.:

- Electroless Nickel/ electroless Gold
- OSP organic solderability preservative

PROTEC 2030

200 x 300 mm Working area: Teflon heating elements 2 pieces per 400 W Dimensions (LxWxH): Power supply:

300 x 400 mm 2 pieces per 800 W approx. 790 x 710 x 1160 mm 230V AC

PROTEC 3040

RLM 419 P

DRY FILM LAMINATOR

The RLM is a dry film laminator especially

Features:

- all common coil diameters
- lower resist roll

- Infinitely adjustable laminating speed
- Electrically heated lamination rollers with uniform temperature distribution
- Separate transport rollers for non-creasing laminate transport
- Digital setting and read out of lamination temperature
- Manually adjustable lamination pressure For all common dry film resists with 3 and
 - 5 inch core diameter
 - Suitable for solder mask application
- RLM 419 P Lamination width max Transport width max.: Lamination speed: 0.2-1.2 m/min

adjustable
adjustable
adjustable
20 - 120° C
digital setting
230 V 50 Hz / 2 kW
38 kg
690 x 630 x 570 mm

1 x 100 A

1500 mm x 620 mm x 910 mm

Single phase 220/240 V 50 Hz oder 60 Hz

4 pieces per 500 W

Standard washing machine hose fittings supplied

36mm push fit polypropylene drain

PROFI 3045

18" x 12" (457 x 305 mm)

18" x 11" (457 x 280 mm)

Process 10 I, Plating 50 I

PROFI 2530

12" x 10" (305 x 254 mm)

11.5" x 9" (292 x 228 mm)

Process 5 I, Plating 25 I

1 x 50 A

Latest and updated product specification is published under www.bungard.com (C) 11/2016 Bungard Elektronik


Latest and updated product specification is published under www.bungard.com C 11/2016 Bungard Elektronik

400 mm

440 mm

made for small companies, schools, research and development departments. All commercial laminates for PCB manufacture and mould-etching technique can be processed. Due to adjustable pressure control and adjustable laminating speed, solder mask application is also possible without problems.

- Easy and fast mounting of resist rollers of
- Detachable inlet table for easy access to

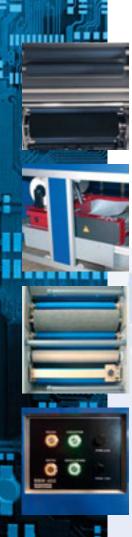

RBM 300

BRUSHING MACHINE

A professional brushing machine designed for use in small series production and laboratories. High quality wet-processing brushing machines for PCB production at low price are possible! The proof is the Bungard RBM 300. The smaller sister of our RBM 402 is reduced wherever possible but not at quality, endurance and high precision details. Features:

- The RBM 300 has an oscillating brush with quick change device
- Oscillation frequency and transport speed are stepless variable
- Parallel height adjustment. In contrary to the single sided height adjustment, you will achieve a long term even brushing result only with double sided parallel height adjustment.
- Machine is equipped with a finishing brush used before laminating. Various brushes available.

Working width 300 mm

 Despite its small size, the RBM 300 has a full scale squeeze-off and hot air drying compartment

 As bench top model the RBM 300 has no integrated water treatment. A closed loop rinsing tank is available as an option

- Single side action
- Aluminium, PVC, Stainless Steel construction
- Transparent top lid with security switch
- Mechanical drying by squeezing rollers

RBM 300

Usable width:	300 mm	
Board thickness:	0,3 - 3 mm	
Brushing speed:	1360 rpm	
Conveyor speed:	0.2 - 2 m/min	
Oszillation stroke:	10 mm	
Oszillation frequency:	approx. 10 - 110 1/min	
Stroke speed:	approx. 0,2 - 2 m/min	
Rinsing system water consumption: 6,8 l/min.		
Power supply:	230 V~, 50 Hz	
Dimensions (LxWxH):	760 x 590 x 415 mm	
Weight:	80 kg	

RBM 402 KF

BRUSHING MACHINES

The RBM 402 KF series is the highest developed brushing machine in our range and can be used for practically all cleaning operation during PCB manufacturing. It is ideally suited for professional prototyping or smallbatch production in modern PCB laboratories. The RBM 402 consists of a double sided wet processing brush compartment, a rinsing and a following squeeze-off zone and hot air drying compartment. The solid construction guarantees proper function and a long life time with a minimum of maintenance.

c=1.01n b1=20.0nn t.=5.00nn	62=15.8m
conveyor ru	

Features:

- simple brush exchange via quick change device
- precise parallel brush adjustment with hand wheel
- Oscillation and transport are stepless adjustable
- Digital read out for board thickness and power consumption of the brush motor
- Upper and lower brushing rollers are adjustable in pressure and have a digital read-out for the settings.
- The wet-processing system comes together with a powerful squeeze + hot-air dryer.
- The "KF" is indicating an integral closed loop rinsing system. That is urgently recommended in order to comply with German and European waste water regulations.

RBM 402 KF

Working width:	400 mm
Conveyor speed:	0.2 - 2 m/min
Oscillation stroke:	10 mm
Oscillation frequency:	0 - 110 lifts/min
Brushing roller length:	410 mm
Brushing roller outside diameter	: 89 - 91 mm
Brushing speed:	1360 rpm
Board thickness (rigid boards on	ly): 0.3 - 5 mm
Board sizes: (mi	n.) 80 x 175 mm
Rinsing system water inlet:	19 mm
Rinsing system water outlet:	40 mm
Rinsing system water consumpti	on: 26 l/min.
Power supply: 230 V,	50 Hz, max. 16A
Dimensions (LxWxH): 1110 x	750 x 1160 mm
Weight: 220 k	g (RBM 402 KF)
170 kg	(RBM 402 BLC)
Brushing stroke on upper roller:	max. 20 mm
Brushing stroke on lower roller:	max. 15 mm
Feed per turn of hand wheel:	0.266 mm
Brushing roller inner diameter:	35 mm
Rinsing system pressure: max.	1.5 bar

Also available version

RBM 402 BLC:

bench-top low cost version RBM 402 KF:

closed-loop version with tank and candle filters








RBM 300 KFClosed loop water management with filtration.Stand alone with rack and integrated water tank.

Picture of RBM 300 KF





AIR 2000

CONVEYORIZED PCB DRYER

Air 2000 is a conveyorized PCB Dryer. Adjustable transport speed ensures perfect drying of holes and surfaces after all wet process sequences.

DEE

Features:

- Continuous drying
- Variable transport speed
- Suitable for different board thicknesses
- Low surface temperature
- Short heating-up time High throughput
- · Bench top machine
- High quality construction

AIR 2000

Working width: 300 mm Board thickness: 0.2 - 4 mm Minimum board length 80 mm Transport speed: 0.2 - 1,2 m/min Heat up time: 5 sec. 352 x 362 x 520 mm Dimensions (WxDxH): 230 V 50Hz Power supply

ULX 110

DRYING AND CURING OVENS

The universal oven is our classic appliance for temperature control in science, research and material tests in industry.

This machine is a perfect masterpiece in terms of technology and is made of high-quality, hygienic, easy-to-clean stainless steel. In regard of ventilation and control technology, overtemperature protection and precisely tuned heating technology all possible aims are perfectly fulfilled.

Features:

- Forced air circulation by quiet air turbine, adjustable in 10 % steps
- Adaptive multifunctional digital PID-microprocessor controller with high-definition TFT-colour display
- · Digital backwards counter with target time setting, adjustable from 1 minute to 99 days

ULX 110

Max. loading of a	chamber:		175 kg
Dimensions (LxW>	H):	864	x 745 x 864 mm
Inner dimensions	(LxWxH):	400	x 560 x 480 mm
Liter:			108
Net weight appro	ox.:		approx. 78 kg
Temperature Rar	ige:		up to + 300°C
Power supply:	230 V~,50/6	0 Hz /	approx. 2.800 W

Air vent with damper

- Multiple overtemperature protection with audible and visual alarm
- · Self-diagnostic system with fault indication
- Programme stored in case of power failure
- Adjustable addition of pre-heated fresh air controlled by air flap control in 10% steps • Program stored in case of power failure

RDC 15

DIP COATER

The RDC 15 is a machine designed for laboratory dip coating of modern liquid photoresist. Today a more and more popular application is the so called: "sol-gel-application". This machine was developed to meet the demand of a greater variety of speeds, iterations, dipping and drip off times and heavier workpieces.

Features:

- Lift bar for several workpiece fittings. The dipping height and the sizes of the aluminium profiles can be easily adapted to even dip-coat bulky items.
- The insertion and the drawing or coating speed is separately adjustable from 30 mm/min until 7200 mm/min.
- The dipping time as well as the drip-off-time. (pause time up and down) is separately adjustable from 1 s up to 99h : 59min : 59s. This enables the machine not only to coat but to precisely develop. This is of great importance with certain photo coatings of the miniature etching technology.
- Up to 8 iterations are possible.
- The working range of the lift bar can be adjusted via the control panel. The maximum size of the workpiece is therefore only limited by the maximum lift range of the machine and the size of your cuvette.

RDC 21-K

- Advantages compared to RDC15:
- Foil keyboard for easy data entry
- Virtual end switch avoids unnecessary drives · Separate speed settings for dipping, coa-
- ting and positioning drives possible Stronger Stepper motor enables a 4-times higher load (5 kg instead of 1,5 kg).
- Minimum speed down to 3 mm/min. As an option 1.5 mm minimum speed also possible
- · Parameters are stored for the next job after switching off machine
- Controller is tiltable and removeable

RDC 21-K

Stroke length: 650 mm Maximum load: 5 ka Weight: 12 kg Dimensions (LxWxH): Insertion speed: Drawing speed: 0 s – 100 h Dipping Time: Drip Off Time: 0 s – 100 h Iterations: Power supply 100 - 240V;



RDC15

troke length:	0 - 600 mm
Aaximum load:	1.5 kg
leight:	12 kg
imensions (LxWxH):	280 x 470 x 960 mm
nsertion speed:	Programmable from 30-7200mm/mi
Prawing speed:	Programmable from 30-7200mm/min
Pipping Time:	0.5 s – 100 h
Prip Off Time:	0,5 s – 100 h
erations:	Up to 8 times
ower supply:	100 – 240V;

50-60 Hz 1.6 A, 100W

RDC 30 MULTIDIP

- Rotary table with 6 cups for multi-coating!
- · Each dive individually programmable (diving, drawing speed, dipping and dropping time)



- gnetic stirrer with programmatic function and speed (1 - 999 1/min)
- Diving and drawing speed between 3 - 7000 mm/min
- Save this job and job iterations possible

350 x 500 x 1000 mm Programmable from 3-2500 mm/min or 1.5 - 1750 mm/min Programmable from 3-7000 mm/min or 1.5 - 3500 mm/min Up to 1000 times 50-60 Hz 3 A, 100 W



Page 66





BUNGARD PICK&PLACE SMT3000

Manipulator for the production of prototypes and small series. The patent-registered Pick & Place head enables the comfortable handling of SMD-components. The modular-built system can be configurated for every use. It realizes the complete process - starting by dispensing of solder paste or glue up to assembling different components.



Features:

- Ergonomic
- Integrated dispenser unit
- Camera fixture
- X/Y-locking device
- Head lightening
- PCB holders
- Desktop workplace · High end quality

Vision system

By means of a camera attached directly to the assembly head, you can view the entire pick & place process - enlarged on a monitor.

X/Y-locking device

The X/Y locking device ensures precision mounting. Individual movement axes can be locked. An automatic function independently locks the X and Y axes when the components are lowered or when placing a dispenser dot. This makes it particularly easy to place Melfs.

Head lightening

The dual LED-light of the pick and place area can be integrated optional. The LEDs are placed on both sides of the nozzle and enable the constant and permanent lightening under the assembling head.

The integration into the control mode of the Manipulator allows the menu routed activating depending on application.







All manipulators have a universal circuit board holder by standard for single- or double-sided PCBs. Elastic holding fingers are adjustable and hold the board in place. Large PCBs can be handled on demand. Customer-specific holders can be adapted or realised directly at our plant.

PCB holders

Di

SMT 3000

ssembling:	300-600 SMDs/hou
imensions (LxWxH):	600 x 600 x 345 mm
ax. outreach (LxWxH):	600 x 1100 x 345 mm
ax. PCB size (LxW):	440 x 245 mn
ax. assembling area (LxW):	350 x 245 mn
CB thickness:	0,5 mm bis ~ 4 mm
eight underneath PCB: min	
omponents: Chip 0201	bis QFP 0,65 mm pitcł
ax. component height:	approx. 16 mn
ub of assembling head:	max. 26 mn
otation angle:	0-360
eight:	approx. 23 kg
ower supply: 100-2	30 V AC, aautomatica
put:	max. 50 VA

(Only by dispensing unit): clean, oil-free compressed-air, max. 4 bar, 1,5 l/min consumption while dispensing pressure connector for tube iØ 4mm, oØ 6mm

COMPONENT FEEDER

The system enables the feeding of components in tapes as well as loose components.



Carousel


The antistatic manual carousel with 45 shelves feeds loose components in a comfortable way.

Tapefeeder

Tape feeders supply you with large amounts of standard components. While removing the cover-tape, the tape is automatically feeded and the components, that should be placed next, are revealed.



Tape strip feeder



This feeder type can handle a single strip of a component tape. Each part can be picked up directly from the tape, it isn't necessary to decante them into bulk containers first.



Bulk container



REFLOW OFEN

The HA06 is a solder oven for SMD component with the use of lead free paste.

The oven is work-ing with full convection forced air during the preheat stage. When the reflow stage is entered the heating will

be done by hot air and guartz lamps. The lamps are needed to get a short ramp speed. Once the reflow set point is reached the lamp power will be reduced to a minimum. At this point 85% of the heating is caused by forced hot air. This unique feature makes the oven suitable for solder big SMD components and/or components with pads under their casing while using lead free paste.

With good maintenance and proper use the oven will serve your solder needs for a long time with high quality solder results.



HOTAIR 06

Power req.: 208/2	208/240 V1 phase 50/60 Hz		
Rated power:	max. 3650 W		
Dimensions (LxWxH):	550 x 490 x 335 mm		
Max. Substrate surface:	300 mm x 370 mm		
Number of heating zones:	2 zones		
mic	roprocessor controlled		
Preheat time:	0-999 sec.		
Preheat temp:	60-260°C		
Reflow Time:	0-999 sec.		
Reflow temp:	90-300°C		
Heat up time to			
thermal stabilization:	approx. 8 Minuten		
Net weight:	18 kg		
Options: co	onnection inert gas N2		
	with flow meter		

Page 68



Some of the features include:

SMD and hybrid

Two heating zones

Reflow process view

Microprocessor controlled

• Outstanding reflow soldering quality for

• ot air quartz oven Cures SMD adhesive

RMP 210 / RMP 3545 MULTILAYER PRESS

This high performance multilayer press was designed for PCB labs to enable quick prototyping of multilayer PCBs according to industry standards. Number of layers is only limited by the maximum lift of the press plates (38 mm). Using separating

metal sheets one can press a couple of boards over each other at the same time. A compact and floor standing aluminium rack

contains all parts of the unit including pressure supply, press plates and heaters.

The large loading door allows quick and easy access to the press chamber and is of course security switch protected.


A compressor, which is integral part of RMP 210 / RMP 3545 is stored in the back of the machine. In the front, you will find additional storage room for tools or boards (lower door). The unit is controlled by two digital and adjustable thermostates, one digital timer as well as a pressure valve with pressure meter.


Four strong air ventilators are activated automatically during cooling cycle.

Steps of multilayer production with RMP 210 / RMP 3545:

- Boards are pinned and stack is inserted into press plates.
- Pressure is created.
- Heater is activated.
- Heating up procedure.
- Press procedure at preset temperature.
- Cooling down under pressure.
- PCB stack is taken out of the machine.

The entire sequence will take approx. 3 hours if you start at 20°C and take out the PCBs at a temperature of 30°C. If you take up protective measures, you can remove the boards at higher temperatures and insert a new stack. This way the press cycle reduces to approx. 45 min. Gross size of the PCBs is 250 x 350 mm (or 350 x 450 mm) which corresponds to a PCB net size of 210 x 300 mm (or 300 x400 mm). To register the layers of your multilayer you can use the register hole function of our software IsoCam and the Bungard Favorit fixes the layers with rivets.

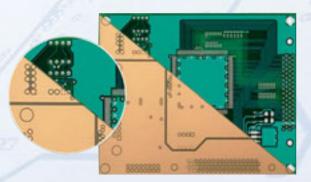

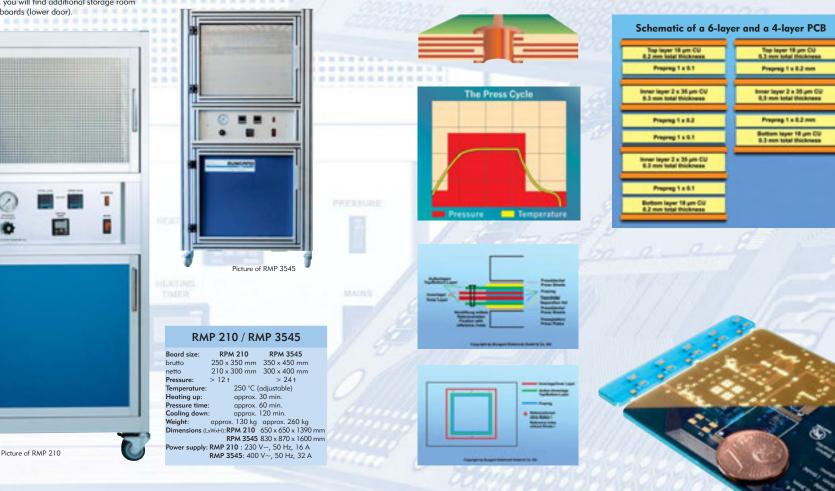



WORLD-WIDE



In 1961, Heinz Hans Bungard (Picture) founded Bungard Elektronik GmbH & Co KG which is nowadays a global player with representatives in 62 countries of the world and 3 manufacturing plants in Germany











 \bullet

•*

GENERAL SALES CONDITIONS

July 2016

1. General

Our deliveries are exclusively subject to the conditions set forth herein which shall be deemed to be explicitly accepted by the purchaser. No conditions which may appear on the purchaser's order shall be binding on us, even without our express contradiction.

2. Quotations and orders

Our guotations are not binding on us. This applies also to information contained in price lists, leaflets etc., Delivery dates stated in our quotations or given to the purchaser by any other means are approximate, and we endeavour to keep to them. Delays in delivery shall give no right to claims, unless we have explicitly confirmed such delivery dates and an adequate period of grace granted to us has expired. Orders shall only be binding on us when they are explicitly confirmed in writing, regardless of the form in which they have been placed with us. The data given in our catalogues are only product descriptions, and in no case they can be regarded as guaranteed characteristics. Furthermore the characteristics of our samples cannot be regarded as guaranteed characteristics.

3 Prices

Prices shall be valid only when confirmed by us in writing. They are exclusive of VAT at the current rate and incidentals such as postage 7.2 The purchaser shall transfer to us, as and packing, freight, insurance etc..

4. Conditions of payment

4.1. Frequently buyers may be supplied on credit account. That must be negotiated before. Height of credit lines are depending on yearly overturn with BUNGARD during the last 12 months

since less than 1 year will not be supplied on credit

we insist in prepayment by SWIFT to our international bank account. Payments costs are born to buyer.

4.4. For orders of more than 25 000 Euro, buyer has to open an irrevocable LC, available and confirmed by any German bank. preferably Deutsche Bank, All LC costs and banking fees inside and outside Germany are to opener's account.

5. Set-off, right to retention

Only uncontested or legally binding counterclaims may be offset against our invoices. Any right to a retention to be exercised by the purchaser in connection with our claims is explicitly excluded.

6. Delivery

Delivery of our goods is explicitly made on behalf of and at the risk of the purchaser. The risk shall pass on to the purchaser when the ordered goods leave our premises. The same applies if goods are collected in our premises after notification of their readiness. We decide at our discretion on the most economical delivery method without assuming any liability for the chosen means of delivery.

7. Reservation of proprietary rights

7.1 All goods supplied shall remain our property until all of our claims resulting from the contract have been paid in full. The purchaser is entitled to dispose of the purchased goods in the ordinary course of business transactions. Reservation of proprietary rights also applies to products resulting from processing, mixing up or combining our goods with goods of third are processed, mixed up or combined with rights of such third parties remain in force, we are entitled to co-ownership according to the proportion of the amount invoiced for such processed goods. Such right to co-ownership shall be safeguarded by the purchaser.

a security, his claims against third parties 9. Withdrawal resulting from the resale of our goods in full or in the proportion of our co-ownership (see subparagraph 7.1). He is entitled to collect the amount of such claims on our behalf until revoked or until cessation of his payments made to us. The purchaser is not entitled to assian these claims to third parties.

4.2. New customers, buying from Bungard 7.3 The purchaser is not entitled to mortgage or transfer the goods which are subject to reservation by way of security.

4.3. For orders of less than 25 000 Euro, 7.4 The purchaser shall advise us immediately at any seizure of our goods or of any infringement of our rights by third parties.

> 7.5 In case of a default in payment or a deterioration in the financial situation, we are entitled to request immediate handing over of the goods which are subject to reservation. Any time limited claims shall immediately become due.

> 7.6 If the value of the securities exceeds our claims by more than 20%, securities to a corresponding amount will be released by us on request at our discretion.

8. Warranty and transport damages

We supply all our machines under a 12 month in-house warranty on parts and workmanship. This means that in this period of time, we repair or, at our choice, exchange, defective parts free of charge and at our facilities. This warranty does not cover transport fees.

Any user intervention to the machine / appliance will void the warranty, if not explicitly requested by us. Normal wear (i.e. on drive belts or spindle bearings) or damage from user intervention (i. e. pulling pc boards from units under tension) are not covered by this warranty.

Our local representative / dealer is in charge of technical assistance in any case of damage. Details of repair / exchange measures and coverage of transport fees are to be handled between our representative and us.

The purchaser shall check possible damages of our supplied goods on transit or transport immediately upon receipt and inform us in writing of visible defects at the latest 8 days after receipt. Complaints made at a later date will not be accepted by us. The purchaser parties, in which case we are considered as shall give us the opportunity to convince manufacturers. In the case where our goods ourselves of the rightfulness of the claim. If a claim is justified, we may repair the damage, goods of third parties, and the proprietary supply replacements or refund the purchase price at our discretion. Further claims of the purchaser, especially claims for damages, are explicitly excluded, unless certain features of the goods had been assured by us. Claims for faulty delivery will in any event come under the statue of limitation six months after delivery.

When delivery in accordance with the contract is not possible for reasons beyond our control, we are entitled to withdraw from the contract. Such withdrawal shall not entitle the purchaser to assert any right against us. 10. Place of performance and jurisdiction,

applicable law


The exclusive place of performance and jurisdiction for both parties shall be 51570 Windeck Germany. Any contract shall be governed by the law of the Federal Republic of Germany

11. Severability clause:

If any clause herein is or will become invalid, such clause shall not affect the validity of the remaining clauses. The invalid paragraph shall be replaced by a valid clause which shall meet as closely as possible the legal and commercial purpose of the original one.

Bungard GmbH & Co KG 51570 Windeck



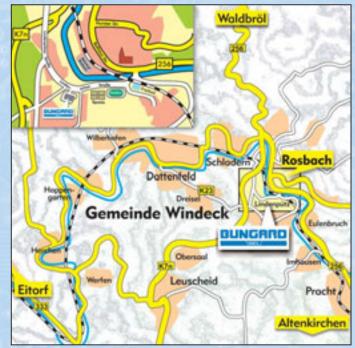

Address:



Bungard Elektronik GmbH & Co. KG Rilkestrasse 1 D-51570 Windeck

Contact:

Phone: +49 2292 / 9 28 28-0 +49 2292 / 9 28 28-29 Fax:

e-mail: info@bungard.de sales@bungard.de support@bungard.de

Web: www.bungard.com



